



Deep Waterproof Kids Smartwatch(SeTrack 2) Quickstart Guide



Card Insertion Method



5 Main function

1. Main manual introduction
After registered, login to the main manual as the following picture:



Partial Functions:

(1)Voice Chat: Voice record can be sent between the Watch and APP.App send voice Voice record start APP begin to record then send to the watch, the max. time is 15 seconds. Short press Power on key to play the voice in the watch.
(2)Map: View the Watch real-time location.
The watch and APP mobile phone location can show on the map. Click 'Locate' to start to locate 3 minutes, the upload interval is 10 seconds, 3 minutes later back to the default mode. On the map you can know the watch locate method, the RED locate icon means GPS, and blue means LBS.
(3)Setting: set all parameters of the watch.

(1) Set SOS Numbers: 3 numbers can be set. Press SOS key 3 seconds to alarm in emergency, the watch dial the 3 numbers in turn automatically, loop 2 rounds to end.
(2) Monitoring: From APP dial the watch no, the watch can not hear the mobile phone, but the mobile phone can hear the sound around the watch.

7 Watch related

7.1 Watch SOS

Long press SOS key(button 2) for 3s. It will display SOS on screen. Watch will be on alert state. Loop dialing 3 SOS numbers for two turns. It will stop when call answered.
If not, it will continue for two turns. Watch can send message to monitor number (default "off") , at the same time send alert message to APP.

7.2 Make friendsTwo watches at the make friends screen and get touch each other, the server will receive the information and can make friends successfully if the time and distance meet the requirements. Then two friends can communicate, long press for delete the friends.

7.3 Wechat
Click to chat with APP or friends.

7.4 Camera
Click to take photo or video.

7.5 Education
Kids can learn the early studying material inside.

7.6 Math
Can play math game

7.7 Answer and hang up calls
Can call to the contact in the phone book

7.8 Turn Off
Long press power key to turn off or reset. App remote turn off , power cut to turn off.

8 Clearing of fault

If the watch first time operating can not connect to the server, it is offline in the APP.
Pis check:

- 1) Confirm the SIM card support GSM network.
- 2) Confirm the SIM card with GPRS function.
- 3) Confirm the ID sticker on the watch rear cover is right. You can send SMS "pw, 123456,tsf" by phone to the watch to check the ID(the watch must be power on with SIM card).
- 4) There are two cases for register failed: a. the ID not existed or the ID already registered, pls ask the agent for help. b. account already registered, change another account to register

Please read this manual carefully before starting to use the watch, pictures for reference only.

1.Preparation

Check if the watch is the correct model and has complete accessories (1*watch,1*USB cable, 1 user manual).
Prepare a 4G LTE SIM card, can ask for your dealer if have any questions (Please turn off the watch before inserting the SIM Card)
Activate data flow, GPRS and caller display function.
Download the APP in your cell phone, can ask the bar code or QR code from your dealer.

2.Product Functions

- GPS +AGPS+ LBS +WIFI Location on Map
- Cell phone APP or computer GPRS platform, both way to control the watch.
- GPRS real-time locating, tracking and monitoring (Voice Care)
- Two-way Phone Call
- WIFI, BT
- Camera
- Album
- Phone book
- Class Schedule
- Kids early education
- Make Friends
- Intercom
- Health
- Weather
- Quick learning
- Alarm Clock
- Security Zone
- SOS Emergency Call
- Low Battery Alerts
- Remote Shutdown

- 4.1 Phone book:click this icon then you can see the 15 contact No. in the APP, select and click any of the No to call.
- 4.2 We chat:Click to chat with APP, can send the voice and picture to cell phone. Note that watch can not send text message to APP, while APP can send text message to watch.
- 4.3 Call:Watch can call to any number, and app can turn on/off this function
- 4.4 Make friend:When on the make friends page, touch watches to add each other as friends, both watches will vibrate and the head Portraits will be lighted up when making friends successfully, watch can add four friends at most. Click head portraits to send voice message and photos to friends. Long pressed the message to delete chatting record. Long press friend's head portraits to delete friend.
- 4.5 Camera click this icon to take photo or video. Setting Wireless & Network, Device, screen intensity, Volume(ring tone, system sound, alarm) modify equipment wallpaper, set up screen dormancy time) set device voice, time and date, equipment (software version, SIM card status and IMEI)
- 4.6 Gallery: Click to check photos, can share, delete or revise
- 4.7 Setting: Can check all related system information
- 4.8 Education: Including: character, fruit, animal, transportation, have Chinese, English playbac
- 4.9 Schedule: preset the schedule on APP from Monday to Friday, click class name to check detailed time, it is able to modify schedule on APP.
- 4.10 Math: Click the icon, and then click "begin", start to play. This game is divided into three levels "Easy, Normal, Hard" Can set up the level by clicking the "Setting" icon.
- 4.11 AppCode: Scan the AppCode to download the Setracker 2 App on the phone
- 4.12 RegCode: Scan the RegCode when register the account on APP
- 4.13 Cleaning tools Clean up the garbage files of the system

(3) Anti-Disturb period: In the 3 period, no calls in.

- (4) SMS Alerts setting: three on-off , which are low power, SOS and taking off watch. The number set in the APP receiving the SMS, the cost is same with normal SMS, this number is also the monitoring number by default
- (5) Phone book: Max10 phone numbers setting. The watch can dial the 10 phone numbers and also can answer calls from them.
- (6) Recover default working mode: Default working mode-GPS on for 24 hours, the upload interval time is 10 minutes
- (7) Remote turn off: it can not press "OFF" key to turn off the watch once it start to work. Remote turn-off only by APP.
- (8) Push switch: When taking off the watch, the APP send the message or not send the message.
- (9) Safe area: the fence is 200m minimum. It will send alert SMS when outside the fence. □ Remarks: the watch can send the alert SMS in GPS locating mode, but it can not send alert SMS in LBS locating mode. □
- (10) Red heart award: Choose the number of the red hearts, click to send to the watch, the red heart and the numbers will display on the screen.
- (11) Alarm clock: 3 alarm clocks are available and you can set the alarm clock on your way.
- (12) Seek the watch: Click it, the watch will ring for 1 minute so that you can find it. Press any key to stop it.
- (13) Remote Camera: press Remote camera, then can take the pictures from the watch. And click the picture for seeing large one, also can turn 90 degrees and see the date and time for the picture.
- (14) Schedule: preset the schedule on APP from Monday to Friday, click class name to check detailed time, it is able to modify schedule on APP
- (15) Health: Can check the pedometer and sleeping status, these two data is only for reference.
- (16) Message: Can check all the messages from the watch, like the SOS, lower battery message
- (17) Footprint: Can check the footprint for recent three month.

3.Watch Introduction and Screen display



(Pictures are for reference only)

Functions of buttons:

Switch button: hold this button to make SOS calls; press this button to hang up. Speaker hole: do NOT insert anything into this hole

Power supply/battery: DC-5V-500mA

Alert: the battery of the watch should NOT be put in the environment with overheating problems, such as exposure to sunlight or fire.



5.APP(SeTracker2) Operation Guide

5.1 APP download and administrator account registration

1.Scan and download the APP
Use smart phone to scan this QR code to get SeTracker, normally open it from browser and download




2.APP register

It need to register by hand first before log in. The ID for register can get by scanning barcode or input by hand.The user name must have four character(letter or digit) at least.ID and user name is unique and can not repeat.Other information can input by yourself. It is possible to change the password. The register picture shown below:


3 Log in

5.2.1 APP function menu

After finish register, input the corrector account number and password, click login, enter the main menu. The main menu show as below:

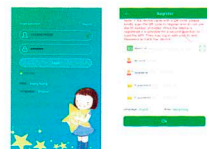

2. "Mine" menu:

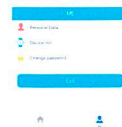

If the account is the administrator, then can see all the assistant administrator list, also have the right to delete the assistant administrator
Personal Data: can edit the account information
Kid's information: can edit kid's information
Device list : Can check the watch ID. If this ID is not the same as the ID on the Sticker, the watch can not connect to the APP.
Change Password: Can change the account log in password.

5.3 APP Watch alert

App terminal will receive the alert messages, then you can click the alert to enter APP main menu to check the message details in message center. If no alert from the phone, then need to check whether the message alert button have been turn on or not

6 Watch working mode

Three work modes: Normal mode, Power saving mode and Real-time locating mode. Different modes have different upload interval time.
Normal mode: upload interval time 600 seconds
Power saving mode: upload interval time 3600 seconds
Real-time mode: upload interval time 60 seconds