

Kids Smart Watch S6



User's Manual

Please read this instruction manual carefully before use to ensure proper installation and proper use of its functions. The color of the actual product may vary from the color shown in this manual.

Before first use:

- Charge the battery for at least two hours.
- To switch on the device, press the "ON/OFF" button for a few seconds.

SIM card

- You must insert a SIM card to be able to use all the functions of the watch.
 - Turn off the smartwatch, make sure the watch is switched off before inserting the card.
 - **Attention:** the SIM card must not have a PIN code.
- We cannot be held responsible for possible faults due to incorrect configuration of the SIM card. In case of doubt, please contact your telephone company to configure the SIM card.

Instructions



1. Camera A, 2. Camera B, 3. Power ON/OFF button, 4. Back, 5. SIM card slot, 6. USB port

Touch operation instructions: Swipe left and right to change the standby screen, click to enter the main menu.

Power On/Off



On: Press and hold the power button for a few seconds.

Power off: Press and hold the power button for a few seconds.

* If the device does not turn on, it may be because the battery is low. Please try again after recharging the device for a few minutes.

Charging

Remove the silicone plug from the USB charging port, then connect the Micro-USB end of the cable to the watch and the other end to the USB charger.

*Once the charger is plugged into the power outlet, the battery icon at the top right of the display will begin to scroll, indicating that it is in charging mode. The battery icon will stop scrolling and display a full battery image when fully charged. We suggest using a 5V 1A charger.

Note: Do not use an adapter with a rated output voltage higher than 5V to avoid damage to the device.

Installing a SIM card

Insert the SIM card into the card slot as indicated by the direction of the symbol (chip up, bevel angle inward). (Install the SIM card with the device powered off).

*The SIM card must be compatible with GSM network, otherwise the communication function will be invalid.

Main interface and operating instructions



1. Battery indicator, 2. Day of the week, 3. Date, 4. Time of day, 5. Signal





Contacts

Tap on the standby interface to enter the main menu, select the Contacts and tap to enter, you can choose Dad, Mom or others respectively, tap set number to enter the interface, after editing, tap save. Press the avatar in the phonebook record interface to make the corresponding call. Note: The phonebook can save 10 numbers.

Dial In the main menu

Select dial and press to enter. After inputting the number on the dial pad interface, press the dial button to make the call directly.

Camera

Select Camera in the main menu and press to enter the preview interface, press the middle button to take a picture, press the convert button on the top left corner to switch the camera and press the back button to go back.

Photos

Select Photos in the main menu and click enter to view the saved photos.

Video

Select Video from the main menu and click to enter, click the camera icon in the lower left corner to start recording and click the back icon to end recording and save. Click the camera icon in the upper left corner to switch between the front and rear cameras.

Player

Select Player from the main menu, click to enter, select video to play.

Music

Select Music Player in the main menu, click to play music. Note: you must copy the song to the My Music folder on the watch first.

Recorder

Select Recorder in the main menu and click to enter, you can record.

Calculator

Select Calculator in the main menu and click to enter, you can use a calculator to do simple calculations.

Calendar

Select Calendar from the main menu and click to enter, you can view the calendar.

Alarm Clock

Select Alarm in the main menu and click to enter, you can set the alarm, up to three different alarms are supported. You can select the time and period.

Wallpaper

Select the wallpaper in the main menu and click to enter, you can set the wallpaper of the main menu.

Tools

In the main menu, select the tool and click to enter. There is a menu for stopwatch / timer / file management.

Games

In the main menu, select the game and click to enter. There are puzzle games are built in the watch.

Settings

◆Language: Multi - language.

◆Time/date: You can set the time and date.

◆Calls: You can check the list of calls made from the device.

◆Silent mode: The clock will be in silent mode when this function is activated.

◆Parental control: long press the screen until you enter the parental control settings. According to the prompt, click the corresponding color area three times, to unlock and enter the parental control settings interface. The daily play time can be set to: no play, 15 minutes, 30 minutes, 60 minutes, 90 minutes, unlimited.

◆Reset: After selecting this option, you can restore the factory settings.

FAQ.

Q: What kind of SIM card is suitable for this watch?

A: The watch only supports SIM card with communication standard starting from 2G GSM. To make a phone call, the voice call service of the SIM card must be activated. Please contact your local communication operator for more information.

Q: Can I use the watch without a SIM card?

A: If the watch does not have a SIM card, communication-related functions such as calling will be disabled.

Q: What are the charger requirements?

A: Use a USB charger for the watch. It is recommended to use ONLY a 5V cell phone charger (1A recommended). Attention: Avoid using the charger more than 5V output, exceeding that voltage is harmful to the device.

Q: How long does it take to fully charge the watch?

A: The watch may take 2 to 3 hours to charge. There is a charging icon on the watch that indicates the current charge. When the charge is low, charge it immediately.

Q: It does not turn on.

A: The battery charge is completely depleted if the watch is not used for a long time. Before trying to turn it on again, first charge it for at least 10 minutes.