

Kids Game Smart Watch – S27



Quick Guide

Touch instructions :

Swipe left or right to switch menus, Swipe up and down to back the previous menu, touch enter the menu.

*Note:

The functions of this product could be subject to change. For the functional modification that will not affect the use of this product, this manual will not be revised. Thank you for your understanding.

1 Get Started

1.1 Power On/Off

Power On: Press and hold the power button

Shutdown: Press and hold the power button(!)

*Before turn on the watch, make sure that the battery is properly installed in the device.

* If the device fails to turn on, this could be caused by low battery. Please try again after recharging the device for 5 minutes.

1.2 Charging

Remove the silicone plug on the USB charging port, and then connect the Micro-USB end of the cable to the watch and the other end to the USB charger.

*After the charger is plugged to the power socket, the power icon at the top right of the screen will start scrolling, indicating that it is in charging mode. The power icon will stop scrolling with a full battery icon when fully charged.

2 Functions

2.1 User interface



You can switch between multiple wallpapers and watch faces. A total of ten

2.2 Camera



In the main menu, slide to select "Camera" and click to enter, you can enter the preview interface, click the left button to take a picture, right button to enter the image viewer. This watch has two cameras, you can choose to switch cameras in the preview interface, and you can choose photo stickers.

2.3 Photos

In the main menu, slide to select Photos and click to enter, you can view the saved photos.

2.4 Video

In the main menu, slide to select "Video" and click to enter, you can enter the preview interface, click the left button to start recording, right button to enter the video player. This watch has two cameras, you can choose to switch cameras in the preview interface.

2.5 Player

In the main menu, slide to select "Player" and click to enter. After entering, a list of recorded videos will be displayed, select and click to play.

2.6 Music



Swipe to select music in the main menu, click to enter, you can play the downloaded stored music. *download*.mp3" music to watch storage disk: My Music.

2.7 Record

In the main menu, slide to select "Record" and click to enter, you can record. Note: need memory in watch.

2.8 Calculator

In the main menu, slide to select "Calculator" and click to enter, you can calculate.

2.9 Calendar

In the main menu, swipe to select the calendar, click to enter, you can view the calendar

2.10 Alarm



In the main menu, slide to select "Alarm" and click to enter, you can set the alarm, up to three different alarms are supported. can set switch on/off, set time and period.

2.11 Torch

In the main menu, slide to select "Torch" and click to enter. The flashlight can be turned on and off as needed, and be careful not to illuminate the eyes directly.


2.12 Theme

Swipe to select wallpaper in the main menu Click to enter, you can change to the preset wallpaper.

2.13 Tool

In the main menu, slide to select the tool and click to enter, there are stopwatch, timer, file manager, reset wallpaper.

2.14 Pedometer

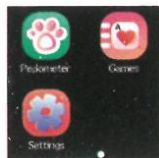

In the main menu, slide to select "Pedometer" and click to enter, You can choose to open, close and clear. After turning on Pedometer, the system will automatically record the number of steps per day.

2.15 Set up

The following items can be set in the settings

◆ **Language** Can set 5 different languages

◆ **Time And Date** You can set the time and date of the watch. Optional date and time format

◆ **Ringtone volume** After switch on, you can adjust the volume of the ringtone of the incoming call. Turn to the lowest to mute.

2.16 Game Fourteen games are installed in the watch

Basketball Shoot master



How to play: Press the basketball to shoot, When the backboard is going to move to the middle, control to shot.

Bee War



Protect your star from the attack by your enemy. Wipe out all of them before they arrive at your base station. How to play: tap left/right to move your war craft to shoot, need to hit twice to destroy the enemy. Score as much as you can! You have a total of three opportunities. You can set "Easy", "Normal" and "Hard" modes separately, and set music on or off and view.

Pinball Hit Bricks



How to play: Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus. Blue bricks need to be hit 2 times. Score as much as you can! The "Easy", "Normal" and "Hard" modes can be set separately. And set turn music on/off or check the score.

Car Grab Goods




How to play: Click the screen left or right to move the car, as much as possible to catch the airdropped supplies. You have a total of three opportunities. The "Easy", "Normal" and "Hard" modes can be set separately. And set turn music on/off or check the score.

Ultimate racing



How to play: Press and hold the car to move left and right to switch lanes. The car in front may drop gold coins. Eat as many gold coins as possible. To avoid crashes, you have only one chance. Can set turn music on/off or check the score.

Memory

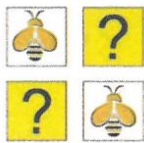

To test your memory ability, you can choose different levels of difficulty and find two identical pictures by flipping through the cards until you find all the pictures.

Princess Dress up



You can choose different clothes, shoes, hairstyles, head wear and so on on the left side of the interface. After selecting, click to change clothes.

Parking puzzle



Click the car drive it to its own parking spot. the color of the car matches the parking spot

Tooth brushing fight



Press the prompt number to quickly click the brushing button. After brushing, please press confirm.

Teddy Bear Escape



Click the car drive it to its own parking spot. the color of the car matches the parking spot

Sky and gold



Control the allow fighter "pay attention to avoiding enemy bullets" and destroy them as much as possible .

Can't stop washing hands



Click on tap that is running as fast as you can when that tap stops another will turn on and you need start tapping that tap as fast as you can. The faster you tap the more points you get. Good luck!

Sudoku



Fill in any number from 1to9 in the blank space and make sure each row, each column, and each of the nine grids contain 1to9 of each number. the numbers are full, all of them go directly to next round. if there are mistakes, you must continue to be revised until they are correct

Tetris



Move, rotate and place the various blocks output by the game to arrange them in one or more rows to eliminate the score. When the cubes fill up the entire game interface, it will fail and the game will end. When the box is falling, each time you click on the box, the box will flip and deform once. Hold down the box and drag it to the left or right to change the position of the drop.