Portable Fan – F1



User Manual

* Note: When using the fan for the first time, please use it after it is fully charged!

Basic usage method:

1. [Charge indicator] Flash once every 6 seconds when the power is less than 30% Flash once every 2 seconds when the power is less than 5% The red light stays on during charging and the green light stays on during charging

2. [Air volume regulation] Click the key for the first time as low gear, click the key again as medium gear, click the key for the third time as high gear, click the key for the fourth time to turn off the fan, and repeat this cycle.

Precautions:

1. Do not insert fingers or foreign objects into the rotating fan blades of the fan shed and fan rear cover

2. Do not put the product or fabric near the fan to avoid danger caused by entanglement

3. In case of abnormal sound, odor, high temperature, irregular fan rotation and other abnormalities, please stop using the product immediately

Use restrictions:

Do not use it under the following circumstances, otherwise electric shock, fire, personal injury and other damages may occur:

1. Places with high temperature, humidity and water contact

2. When the power cord is damaged

Maintenance:

1. Please unplug the power cord when cleaning the fan.

2. Keep the air vent of the motor away from dust or fluff and unplug the plug when cleaning with a vacuum cleaner, Do not try to remove the fan to clean the fluff When cleaning the housing, wipe it with a cloth stained with detergent, Do not clean the surface with any grinding tool or solvent that will damage the surface.

3. Water or other liquids are not allowed to enter the motor.