

Electric Eyelash Curler - CS1078



User Manual


Thank you for using our electric eyelash curler

Please read the manual carefully prior to use in order to use this product correctly.

Notes Caution

- Check if this Product is damaged or burnt prior to use; if so, do not use this Product.
- Please keep the USB cable and charging port dry.
- Please do not use this Product while it is charging. 'This Product should not be used by: Those with allergies; those with wounds, inflammation or lumps around the eyes; or those with eye diseases such as vernal conjunctivitis.
- This Product should not be used by the following people (including children), unless otherwise accompanied by an adult: Those with deteriorated physical function, mental capacity or lack of relevant experience and knowledge. These people are required to use this Product under the supervision or guidance of others.
- Do not wear contact lenses when using this Product.
- Should you feel any eye discomfort during or after use, stop using this Product immediately and see a doctor in a timely manner.
- Keep this Product out of reach of children. 'Clean this Product and its components regularly to prolong their service life.
- Do not share this Product with others.
- Do not dismantle, repair or alter this Product on your own, so as to avoid accidents.
- Do not store this Product in humid or hot places for a prolonged period, as it is powered by a lithium battery. Please fully charge this Product if it is idle for a prolonged period. Please discard this Product at a specified recycling station; do not throw it into fire, or dispose of it with common waste.

Introduction

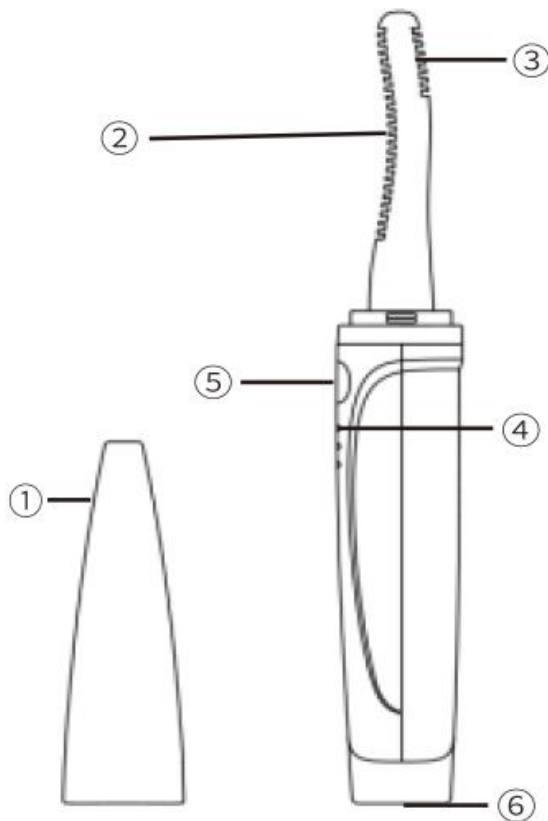

1. Protective cover
2. Long electric brush
3. Short electric brush
4. Level indicator
5. ON/OFF button
6. USB charging port

Parameters

Product Name: Electric Eyelash Curler

Temperature range: 55-85°C

Rated voltage: 3.7V

Rated power: 1.8W

Net weight: 33.3g

Product size: 154.5*20.5mm

Package size: 169*70*29mm

Preparation before use:

Please recharge this Product before use, for it has a low charge when leaving the factory.

This Product has a low power prompt function.

The indicator will blink continuously when it is low on power; it will blink quickly for 2s and then shut down once the power runs out completely.

Charging Process

- Make sure this Product is powered off.
- Insert the USB cable into the USB socket at bottom of machine, then insert the power adapter (not included in package) into the socket.
- The level 3 indicator will blink when charging. All 3 level indicators will be on when charging is complete. The total charging period is about 2h.
- This Product can be used for approx. 40 continuous min after being fully charged.

Attention: Do not try to replace the rechargeable battery.

How to Use:

• Power on/off


Press the on/off button for 2s to power on. This Product can be used for 10min at a time. It will shut down automatically if it is idle for 10min, or press the on/off button for 2s after use to turn it off.

• Temperature level/level adjustment

Level 1 (one indicator is on): 55°C

Level 2 (two indicators are on): 70°C

Level 3 (three indicators are on): 85°C

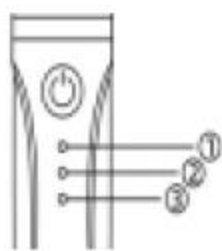

This Product will enter Level 1 after startup by default. Switching the level will change the temperature from Low → Middle → High.

• Usage Steps

Please use this Product in front of a mirror to avoid pushing on the eyelids or damaging to the eyes due to misoperation. Avoid contact of either sides of the brush with skin, for both sides are heated when using this Product.

- Remove the protective cover, start the Product and preheat the electric brush for 15 s before use. The long electric brush is used to curl the upper eyelash, while the short electric brush is used to curl the eyelash at the corner of the eye and the lower eyelash.
- Apply mascara cream first (to ensure better curling effects)
- Place the preheated long electric heating brush against the upper eyelash, staying at the root of the upper eyelash for about 3s. Then move it upwards to the eyelash tip and stay there for 3s; repeat the operation 2-3 times.
- Use the short electric heating brush for fine curling of the eyelash at the corner of the eye.
- Recommended usage sequence: Upper eyelash, lower eyelash. Move slowly from the eyelash root to the eyelash tip, repeat this operation 1-3 times.
- Power off this Product after use, then clean this Product when the electric heating brush has cooled down.

Cleaning & maintenance

Please clean this Product in a timely manner after each use, to ensure the best efficiency.

Make sure this Product is powered off prior to cleaning.

Do not immerse this Product in water, rather wipe it with a clean cloth or a damp wet cloth. The electric heating brush can be wiped with a soft cloth or swab that has been dipped in makeup remover; then cleaned with a clean cloth. Do not clean this Product with steel wool, abrasive cleaning agents, chemicals or corrosive liquid.

Do not use lubricating agents, cleaners, polishing agents or air fresheners on this Product.

Recycling

Do not discard this Product with common waste, for its built-in lithium battery may contain pollutants. Instead, discard this Product in a specified e-waste recycling station to contribute to protecting the environment.

