

## Rechargeable Hair Clipper – SH-7196



### User Manual

Before using the product, please read carefully the operating instructions and keep properly for future reference.

1. Only USB standard charger can be used with this product.
2. Charge voltage 5V(USB).
3. The temperature for the product's charge and storage should be between 5 and 35 °C
4. Make sure the charge will not become damp (Fig 1).



5. Do unplug the charger before cleaning the shaver with running water (Fig 2).



6. Knife head can be washed without washing the body.
7. This product cannot be used by physically distempered, sensorially or mentally disordered, or inexperienced persons (including children), unless they are under supervision or instruction by people in charge of their security.
8. Take care of children to keep them away from this product.
9. When the shaver is charging, the indicator lamp will be off. Press the switch button back to the off state for charge.

10. It's necessary to ensure to put the protective cover on the shaver when you travel to protect the shaver head.

11. Please clean inside beard if the shaver can not work after you press the switch.

### **Charge**

Make sure the product is power-off before the charge. The charge lasts about 3hours. It's better for the product not to be connected to the power supply for more than 24 hours.\_ ( Remark:The indicator light will not change or turn off when it is fully charged.)

1. Insert the product charger into the shaver (Fig 3).



2. Plug in the charger .

3. The charge indicator lights up (Fig 4).



4. After the full charge, unplug the charger and also pull off the product's plug from the shaver.

### **How to Use Product**

#### **Shaving**

1. Press the button ON/OFF to start the shaver.

2. Make the shaver head part move quickly on the skin in straight lines and circles (Fig 5).



3. The shaver can run for ten days after a full charge.

#### **Cleaning & Maintenance**


To ensure a better shaving effect, the shaver must be cleaned regularly. The easiest and most sanitary way to clean the product is to wash the shaver head part and the whisker storeroom with water each time after using it. Do be careful while using hot water. Do remember to check the water is not too hot to avoid harming hands.

Every day: the shaver head part and the hair storeroom.

1. Cut off the power supply of the shaver, then unplug the charger and also pull out the product's plug from the shaver.
2. Open the shaver head part (Fig 7).



3. Clean the shaver head part and the hair storeroom with hot running water (Fig 8).

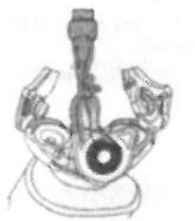

Make sure both of the shaver head part and the hair storeroom be cleaned thoroughly.

4. Wash the products surface (Fig 9 ).



5. Close the shaver head part and throw off surplus water. Do not wipe the shaver head part with a towel or paper tissues, which may cause damages to the shaver head.
6. Open the shaver head part again and remain so to dry up the product (Fig 10).



You can also use the brush included to clean the hair storeroom. Here water should not be used.

### **Store**

It is recommended to dry the electric shaver first, and put on a protective cover to prevent damage to the blade net and to avoid dust accumulation in it. Replace the cutter head. In order to get the best shaving effect it is recommended to replace the knife head and knife net every 6 months, please use original accessories.


**Note:** Only separate the hand-held part from the power cord before cleaning the hand-held part in water.

**Deep cleaning:**

1. In the opened head cover, turn the fixing frame release button counterclockwise to take out the fixing frame
2. Remove the knife net (Fig11)



3. Separate the knife net and clean the knife net with a cleaning brush. (Fig12)

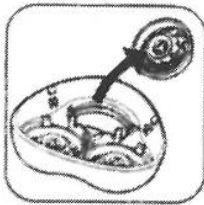

4. After cleaning, insert the knife net and the fixing frame into the head cover in reverse order. (Fig 13)



**Maintenance**

1. It is recommended to clean the knife net every two months.
2. Regular cleaning of the electric shaver can guarantee a better shaving effect.

**Note:** Do not use a towel or paper towel to wipe the electric shaver knife net, because this may damage the knife net.

**Environmental Protection**

1. To discard the product, please don't put it together with general domestic rubbish heaps but hand it to the officially designated recycle center for the environmental protection (Fig 14).



2. The built-in rechargeable battery contains substances which may pollute the environment, so it must be unloaded from the product or sent to the officially designated recycle center to be disposed before it is discarded.

**The battery should not be unloaded unless it has been used up.**

1. Unplug the charger and also pull out the product's plug from the shaver.
2. Unload the battery. Do not plug in the shaver again after unloading the battery.
3. We recommend going to a specialized technical service when you need to replace the battery.