

Smart watch  
Instructions



- Thank you for buying. To make this product in the best condition, please read this manual, and keep standby after reading. Specifications is just a functional diagram, maybe it is little different with physical , the product version you got shall prevail. The typing errors in this manual and discrepancies will be timely updated with the latest products. If we have updates, this manual will be subject to change without notice. Our company reserves the right of final interpretation.
- It is strictly prohibited to disassemble the product.
- It is strictly forbidden to put the battery in high temperature or dispose of battery in a fire,lest it may explode.
- It is strictly forbidden to use something sharp to hit the screen.
- It is strictly prohibited to use corrosive chemicals, detergents to touch this product.
- It is strictly prohibited to expose this product for a long time under the sun, or too much smoke and dust.

Contents

A. Product description.....

1. Product appearance.....

2. Disassemble battery diagram.....

B. Function operation.....

1. The function introduction.....

2. Operation.....

2.1 The buttons.....

2.2 The main menu display and operation.....

3. Settings.....

 
3.1 Smartwatch settings.....

3.2 Bluetooth settings.....


4. Push service application.....

C. Others.....


A. Product description

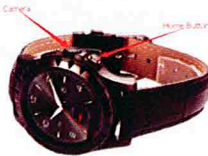

 1. Product appearance

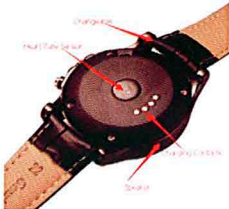

 2. Disassemble charging diagram

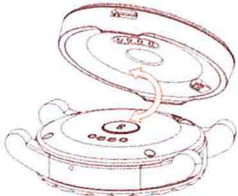

B. Function operation

1. The function introduction

Bluetooth: bluetooth dial, sync contacts, call records, bluetooth MP3, Bluetooth remote control camera

Notice: SMS, wechat, facebook, whatAPP, etc.

More: HD display, Nano glass, Steel metallic body, Changeable bands, camera, IP67Waterproof, Power saving mode, Anti-lost, Sedentary reminder, Alarm Clock, Calendar, Thermometer, ECG, smarhome control, Sports pedometer, Recods, Video, Stopwatch, etc.

2. Operation

2.1 buttons

Long by the home button: turn on or off; short by: back by clicking and paddling screen to enter the main menu and settings.  
Press the home button to restart, If the screen freezed.



2.2 the main menu display and operation

1. Display time, date, week;
2. Three ICONS at the bottom



Paddling screen to enter the next menus.

3. Settings

3.1 Smartwatch settings

1. BT Settings
2. Clock settings: you can set time and date
3. Sound settings
4. Volume settings
5. Display
6. International Settings: change language
7. Factory Reset

3.2 Bluetooth settings

1. First turn on bluetooth and make your device can be searched
2. The default name: S2 (can be modified)
3. Turn on your smartphone Bluetooth to Search this smartwatch
4. Click to connect, then they will match, when you see the phone notice about matching, choose "yes" please.

4. Push service application

1. Download and install "Mediatek SmartDevice" APK on smartphones to sync successfully.  
1). Android phones can scan Two-dimensional code on the menu, to install directly, or you can search "Mediatek SmartDevice" to downloaded and install. Watch - bluetooth connection - search to connect smartphone, after the connection, enter the smartphone settings - auxiliary functions - " Mediatek SmartDevice" - open.



- 2). Iphone needs: Watch - bluetooth connection - search to connect smartphone, after

- the connection, enter the smartphone settings – Bluetooth- search sevice- find S2-connect, connect sucessfully.
2. Click on the install package, install the APP, then icon appears after the completion of the phone desktop;
  3. Ensure the bluetooth connection of the smart phone and watch.
  4. Click on the APK icon into the bluetooth notification Settings interface;
  5. Click on the "auxiliary function Settings" to active "notice" bluetooth (bluetooth notice: enabled)
  - 6.choose the application that need to be noticed.

C. Others

1. It appears these problems: due to manufacturing, materials, design and other causes of product quality problems, when the product is in normal use within one year (since the day of purchase) we will offer free warranty.
2. About the fault caused by the users personal reasons, we don't offer free warranty, as follows:
  - 1). Disassemble or refit the product.
  - 2). In the process of using immodesty drop caused .
  - 3). All artificial damage or by a third party negligence, misuse (such as:make water into the host, the external force shatter, scratch damage of peripheral components, etc.), is beyond the scope of the warranty.
3. When ask for free warranty, please must provide a warranty card with the seal of purchase place and purchase date.
4. When ask for free warranty, please take the product to the company or the company dealerships.
5. All the features of the product in kind shall prevail.