

Contents

A. Product description.....	3
1. Product appearance.....	3
2. Disassemble battery diagram.....	3
B. Function operation.....	4
1. The function introduction.....	4
2. Operation.....	4
2.1 The buttons.....	4
2.2 The main menu display and operation.....	4
2.3 The watch function menu.....	5
3. Settings.....	5
3.1 Smartwatch settings.....	5
3.2 Bluetooth settings.....	6
4. Push service application.....	6
C. Others.....	7

A. Product description


1. Product appearance



3 / 9



2. Disassemble charging diagram

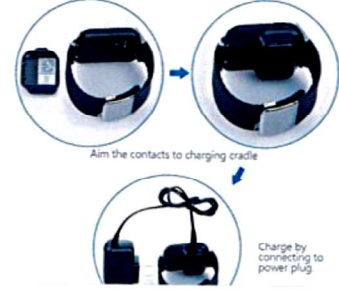

4 / 9

2 / 9

Function operation

1. The function introduction

Bluetooth 4.0: bluetooth dial, sync contacts, call records, bluetooth MP3, Bluetooth remote control camera.

Notice: SMS, wechat, facebook, whatAPP, etc.

More: HD display, Sapphire glass, Steel metallic body, Changeable bands, 2.0MP camera, Waterproof, Power saving mode, Anti-lost, Sedentary reminder, Alarm Clock, Calendar, Heart rate sensor, smarthome control, Infrared, Sports pedometer, Recods, Video, Stopwatch, etc.

2. Operation

2.1 buttons

Long by the home button: turn on or off;
short by: back

by clicking and paddling screen to enter the main menu and settings.
Press the home button to restart, If the screen frozen.



5 / 9

2.2 the main menu display and operation

1. Display time, date, week;
2. Three ICONS at the bottom: Camera, Pedometer, Settings.



Paddling screen to enter the next menus.

2.3 the watch function menu



6 / 9



3. Settings

3.1 Smartwatch settings

1. The smartwatch settings: you can set time and date, time switch, language, input, the standby screen, the main menu display, handwritten and brightness, etc.
2. The notification settings
3. The calls settings
4. The network settings
5. External connection
6. Security Settings
7. Factory Reset

3.2 Bluetooth settings

1. First turn on bluetooth and make your device can be searched
2. The default name: G2 (can be modified)
3. Turn on your smartphone Bluetooth to Search this smartwatch
4. Click to connect, then they will match, when you see the phone notice about matching, choose "yes" please.

7 / 9

4. Push service application

1. Download and install "Mediatek SmartDevice" APK on smartphones to sync successfully.
 - 1). Android phones can scan Two-dimensional code on the menu, to install directly, or you can search "Mediatek SmartDevice" to downloaded and install.



- 2). Iphone need to download "Mediatek SmartDevice" on app store directly. Watch - bluetooth connection - search to connect smartphone, after the connection, enter the smartphone settings - auxiliary functions - " Mediatek SmartDevice" - open.



2. Click on the install package, install the APP, then icon appears after the completion of the phone desktop;
3. Ensure the bluetooth connection of the smart phone and watch.
4. Click on the APK icon into the bluetooth notification Settings interface;
5. Click on the "auxiliary function Settings" to active "notice" bluetooth (bluetooth notice: enabled)
6. choose the application that need to be noticed.

8 / 9

C.Others

1. It appears these problems: due to manufacturing, materials, design and other causes of product quality problems, when the product is in normal use within one year (since the day of purchase) we will offer free warranty.
2. About the fault caused by the users personal reasons, we don't offer free warranty, as follows:
 - 1). Disassemble or refit the product.
 - 2). In the process of using immodesty drop caused .
 - 3). All artificial damage or by a third party negligence, misuse (such as:make water into the host, the external force shatter, scratch damage of peripheral components, etc.), is beyond the scope of the warranty.
3. When ask for free warranty, please must provide a warranty card with the seal of purchase place and purchase date.
4. When ask for free warranty, please take the product to the company or the company dealerships.
5. All the features of the product in kind shall prevail.

9 / 9