

# User Manual

Thank you for buying!

To make this product in the best condition, please read this manual first, and keep for spare. The functions on the user manual may be little different with physical, please make the final products as the standard.

The typing errors in this manual and discrepancies will be timely updated with the latest products. If we have updates, this manual will be subject to change without notice. Our company reserves the right of final interpretation.

## Contents

User Manual .....	1
— Product and Accessories:.....	1
= Functions and Instructions .....	2
1, Operating instructions:.....	2
2, Features Overview .....	2
3, Guide of Connection (Smartwatch and Smartphone).....	2
≡ Note : .....	4

### — Product and Accessories :

SmartWatch x1

USB Cable x1

Charging Cradle x1 (some models doesn't need)

User manual x1

1. Turn on the Bluetooth both smartwatch and smartphone, make sure smartphone bluetooth was setted "can be searched", you can see this from smartphone bluetooth setting;
2. Search Watch Bluetooth with smartphone (and vice versa);
3. Then please pair, there will be some notice about permission, please click "Yes".
4. Download and Install APP to Sync.

If your smartphone is Android system:

Please scan the QR Code on the watch, download and install to your smartphone. Or you can search "Mediatek SmartDevice" or "Fundo APP Android", download to your smartphone, there will be some notice about permission, please click "Yes".

When the Bluetooth logo on the watch change into green&blue, it means "success", if not, please disconnect the Bluetooth and connect again.

Note: Please turn on the "Mediatek SmartDevice or Fundo APP" by this route:

Setting - "Accessibility Feature" - "Mediatek SmartDevice" or "Fundo APP".



If your smartphone is Android system:

Please search "Mediatek SmartDevice" from App Store directly, download and install to your smartphone. Click on "Accessibility settings" to turn on "Bluetooth Notice", here you can selected application notifications.

Battery x1 (some models are built-in battery)

## –Functions and Instructions

### 1, Operating instructions :

Long press the home button to turn on the smartwatch, then you can see the standby clock. Slide the screen to enter the main menu and functions menu.

short press the home button to return, then long press to turn off.

If the screen is frozen, press the main button for 10 seconds to restart.

Long press the standby clock, you can quickly change the clock, you can change on the setting menu.

When enter "setting" menu, you can set the date and time, the clock interface, volume, brightness, language, remind mode (vibration, ringtones, silent), restore factory (initial password is 1122), etc.

Please fasten charging cradle with the watch, connect the watch with charger or computer by USB cable. (Note, some models don't need charging cradle, just connect directly by USB cable).

### 2, Features Overview

Calls, Messages, Contacts, Call records, Bluetooth connection, Camera, Bluetooth remote camera, Calendar, Alarm clock, Calculator, Anti-lost reminder, Power saving mode, Bluetooth music, Pedometer, Sedentary remind, Sleep monitor, Heart rate sensor, Ultraviolet test, Thermometer, etc. Please make the final products as the standard.

### 3, Guide of Connection (Smartwatch and Smartphone)

#### ≡ Note:

1. If it appears quality problems caused by manufacturing, materials, design within one year ( since the day of purchase ), we will offer free warranty. Premise is using normally and correctly.
2. About the fault caused by the users personal reasons, we don't offer free warranty, as follows:
  - 1). Disassemble or refit the product.
  - 2). Caused by immodesty drop
  - 3). All artificial damage or misuse (such as: make water into the host, the external force shatter, scratch damage of peripheral components, etc.), all these are beyond the scope of the warranty.
  - 4). When ask for free warranty, please must provide a warranty card with the seal of purchase place and purchase date.
  4. If you met problems during use, please contact the shop customer service which you bought from.
  - 5). Please make the final products as the standard.

It is strictly prohibited to disassemble the product.

It is strictly forbidden to put the battery in high temperature or dispose of battery in a fire, it may explode.

It is strictly forbidden to use something sharp to hit the screen.

It is strictly prohibited to use corrosive chemicals, detergents to touch this product.

It is strictly prohibited to expose this product for a long time under the sun, or too much smoke and dust.