 
SMART WATCH GV18 USER'S GUIDE

1. Safety Warning

- The information in this document won't be modified or extended in accordance with any notice.
- The watch should be charging 2 hours at least before use.
 Security Code
- The original code is 1122, this code can prevent your watch in use by others without your permission.
- Please change the original code to insure your personal \ information safe.

2.Product details:

2.1 Product details



Power button: Power On/Off, Awaken/turn off screen,

Back to main menu

USB port: Charging/Data,

Touch screen: each function (main menu) will be

shown and displayed on capacitive

touch screen.

1

3.Product quick use

3.1 Download the Sync software.

Scan QR code ,down load the APP which can match your android phone. This APP only use for the Sync between watch and phone, will not take your phone GPRS. If you already download the related softwares, please check the version and use the newest related softwares in order to ensure all function normal use. Please update the software when it has new one and we will not further notice when the software updates, users can download the new software "Bluetooth notice" at App Store or Android Market and so on.

3.2 Install and use the Sync software

Android Application installation

Please install the android application in your smart phone. You can storage it into your phone memory or install by Sync assistant.

Android application usage (already installed) (Smart phone) Setting -- Accessibility—Enter into Bluetooth notice (service), enabled this service. (please choose "sure" when shown a warning notices) the application runs on the background automatically and sync function will be switched on as below:

2.2 Products quick into

You can enter into next page by sliding screen to the left, and return to last page by sliding screen right; enter into the notice board after sliding from up to down, and return to main mean from down to up. It is will be in mistake for a click if the drag distance too short.

2.3 Clock Display





Setting method:


Method 1: Power on, when the phone in clock mode, please click middle screen and set different clock

interfaces if you like.

Method 2:Power on, Main menu: setting--phone setting--standby menu display -- unlock selection,

choose the clock mode if you like.

2

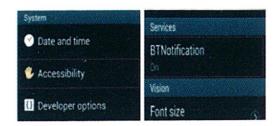

Click the Bluetooth notices and choose the Notification service, select your Personal or System application in Notify application. Telephone service is including SMS, incoming call and seek watch.

Notice:

Please don't shut the Bluetooth notify service when you are clearing software by background or close background application software. It will affect the Sync function between watch and phone if shut it.

- 3.3 Bluetooth Connection and Sync function
- 3.3.1 From phone to watch

Phone setting—turn on the Bluetooth --search for devices, please click pair devices when found APLUS, and also choose "yes "in your mobile phone, paired done.

Please choose "sure" when there is phone book request, meanwhile you'd better choose "no remind again", this is convenience when you connect next time(without remind again).

Notice:

The Sync software can open in sync APP already installed and Accessibility, the mobile will show Bluetooth connected done after 2-5min; the watch will inform you the time of Sync with phone, than the Sync switched on. The message will sync to you watch when it incoming to mobile.

3.3.2 From watch to phone

BT Dialer on APLUS—search new device—found your smart watch (such as \$9500) -- connect. The processes of next are same with 3.3.1

3.4 Base function

3.4.1 Message

Sync phone or watch message.

3.4.2Bluetooth

Sets the Bluetooth status, turn on/off.

3.4.3Calls records

You can check your phone call records after you connect with the Bluetooth.

Shown all records including miss call, dialed calls and receive call; You can check the date, time and phone number of the miss call after you choose it, but only can call this number.

3.4.4 BT dialer

Paired devices from smart watch

3.4.5 Remote notifier

When there is SMS, incoming messages from QQ and other applications on the connected phone, the watch phone will alert you to read them.

3.4.6 Remote cameras

Use phone camera take photos, but remote by watch,

5

3.4.19 Audio player

Can play music from local or smart phone after connect with Bluetooth.

3.4.20 Theme setting

3.4.21 Camera

3.4.22 Video recorder

3.4.23 Image viewer

3.4.24 Video player

3.4.25 Sounder recorder

3.4.26Phone QQ

QQ need your phone has SIM card and can surf the Internet.

3.4.27 Browser

Browser need your phone has SIM card and can surf the Internet.

3.4.28 SIM tool

4.NFC function:

4.1,0 Operating Environment:

4.1.1 Please use our NFC strap, if you change the strap you can not use this feature.

4.1.2 Use with your NFC mobile phones or other support NFC function terminal.

4.1.3 Use of NFC notice: First install APK file of NFC such as: NFC Task Launcher etc.

4.2.0 How to fast connection of smart phone.

4.2.1 Use our NFC strap and make you smart phone Bluetooth is turn on.

4.2.2 Unlock NFC of your smart phone.

its need switch on the camera of phone in advance.

3.4.7Anti lost

Watch seek phone, or phone seek watch.

3.4.8Setting

Notice: sets clocks display and theme in phone setting. In the security Settings, the safe code is 1122.

3.4.9 Pedometer

It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number of steps, distance, speed, time, etc., to control exercise.

If you want return to main menu but keep pedometer during the exercise, please press the power button.

3.4.10Sleep monitor

Show your sleep quality base on your sleep times.

3.4.11Sedentary remind

You can set a time to remind you up to do some exercise, we suggest you this time could be one hours.

3.4.12 Quick response

It can download sync software when scan the quick response, if there is a new version need to update, please contact with our servicer, our company will provide a new link for your download.

3.4.13Smart search

Search information about watch

3.4.14 Alarm

3.4.15Calendar

3.4.16Calculator

3.4.17Profiles

3.4.18File manager

6

4.2.3 The position of NFC on the strap close to smart phone can fast finsh the bluetooth connect ion

4.3 Create NFC function.

Sample:

Mobile model: Millet 2A software:NFC Task Launcher.







★小提示: 在写入标签的时候、如果无法写入成功,有可能是因为手机的NFC 天线与NFC标签没有对准、可以来認稀油手机来输认天线的位置直到写入成功。

9

6.2 Shut down automaticlly

Low power, please charge the watch

6.3 Using time too short.

Battery is not full, please make sure it is full power (full charge need 2hours at least). During the use of SIM card, the power will be run off soon if the signal too poor.

6.4 Unable to charge.

The battery's life will be reduce after few years, please check if the battery are work. Change a new charger if it is unworkable. Please check the USB slot connecting good, if no, please try again.

6.5 No caller's name when incoming call
Forgot to choose upload the phone book when connected with BT, or unselected keep upload the phone book. Forgot to sync the phone book when reconnected, please pair the device and connect BT again. 5.6 Bad phone call voice.
Watch and phone are separated too far, please be more close; Bad signal of BT.
Bad signal of your own phone call place, please change a more better place for phone call.

Warm tip:

When you writting the tag if the tag can't write successful, that might be the mobile NFC antenna and NFC tags are not aligned, you can move back and forth the mobile phone to confirm the position of the antenna until written to success.

5. Notice

- 5.1 Full charge before use, the charge time need 1-2 hours.
- 5.2 Use the accessories cable and charger, or your android phone accessories.
- 5.3 Bluetooth will disconnect when exceed the distances, after switch on the Anti lost, the smart search function can't be use before reconnect with Bluetooth.
- 5.4 Please reconnect with BT if it's disconnected occasionally (please Manual connect if the Bluetooth disconnect over 5 minutes).
 Please agree the phone book Sync otherwise there is no called phone book.

5.5 When playing the music, some of music's name can shown and some can't, it is normal, because android phone are difference.

6. Common trouble shooting Please refer below key function for any problems with the watch, if the problem is still unsolved, please contact with our dealer or serviceman appointed.

6.1 Unable to switch on
The time of press the power button too
short,please keep it more than 3 seconds.
Low power,please charge it.

10