


SMART WATCH KIDS V114 USER'S GUIDE

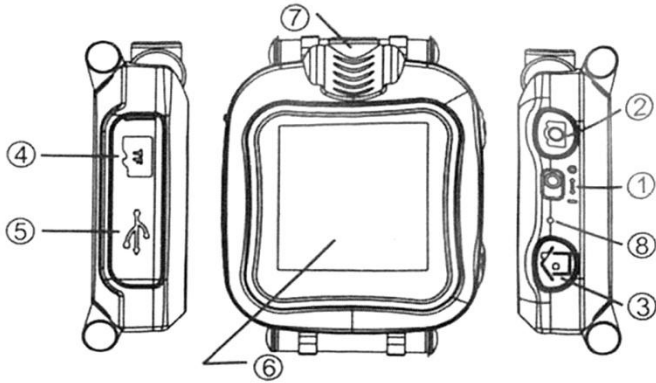

PRODUCT USER INTERFACE:

- 1) ON/OFF SWITCH
- 2) CAMERA/SHUTTER BUTTON
- 3) HOME BUTTON
- 4) Micro SD Memory CARD SLOT
- 5) USB PORT
- 6) 1.5' Colorful Touch Screen
- 7) Turn-able CMOS Sensor : 0.3 Mega Pixels Resolution
- 8) Built-in Microphone

1

Turn on the watch. Press or for 3 seconds to wake the Smart Watch up.

FUNCTIONS:

1. Camera

Movable camera with 90° rotation

- Press or to take a photo.
- Swipe the screen from down to up to invert the focus.
- Tap switch to VIDEO mode.
- Tap to add photo frames, then swipe to choose frame.
- Tap to view the photos or videos.

2. Video

Tap switch to Photo mode.

- Press the or start record. press the again or to stop recording.
- Tap to add video frames, then swipe to choose frame.
- Tap to view videos.
- Tap to play the last recorded video.
- Tap to display the delete menu.

3

INCLUDED IN THE BOX:

- 1 Smart Watch With Silicone Wristband
- 1 USB cable
- 1 User Manual

BEFORE USING SMART WATCH:

Rechargeable Battery: Before using, please charge the battery by connecting to a computer with the included USB cable. Insure the ON/OFF switch is turned to the ON position. Don't charge over 3 hours.

Note: Charging the battery should only be done under adult supervision.

BATTERY NOTICE

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions:

- Do not disassemble.
- Do not expose to high temperatures or place near a heat source.
- Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.

Micro SD Memory Card Installation:

- Insure the Smart Watch is turned OFF and chip up.

Connecting to a Computer:

1. An icon "Charging" shows in the display.z
2. The battery is charged while the connection is maintained.
3. The "PHOTO" and "VIDEO" folders are uploaded to the computer.

TO START USING SMART WATCH:

2



3. Voice Recorder

- Tap to start the voice recording. tap to stop.
- Swipe to see the previous or next file.



4. Talking Hippo

- Tap Hippo's head, tummy, hands, feet, it shows different look and movement.
- Hippo will go to sleep if no operation for 50 seconds.
- Imitation
- Speak to Hippo, he will distort and repeat what you said.



5. Timer

- Tap to start the timer.
- Tap or swipe to change the timer style. 5 different timers for you to try out.

- Tap the TIME to enter the timer settings. Swipe to set minutes and seconds. Once set, press to go back and save.
- Tap to pause the countdown, tap it again to resume. Tap to stop the countdown and reset the timer.



6. Time Master


- Tap or to select the time you want the penguin to say.
- Tap or to adjust hour/minute.
- Tap the clock or the penguin to tell the time.





7. Stopwatch

- Tap to start the stopwatch.

4

· Tap  or swipe to change the stopwatch style. 5 stopwatch styles to select!


· Tap  to pause, tap it again to resume. Tap  to stop and reset the stopwatch to zero.




8. Alarm

· Tap the TIME or  to set the alarm time.


· Tap  to toggle the alarm on or off.

· Tap  to display the alarm tone. built-in 5 tones. Swipe to preview the different tones and animations.


· Tap  to confirm the selection.




9. Playback

· The latest file will be shown first, tap the  or swipe to see the previous next file.


· Tap  to view the photos in slideshow mode.

· Tap  to play the video.

· Tap  to display the delete menu.



10. Menu Layout

· Tap  to change the color scheme of menu.

· Tap  or  to select a menu layout option.



11. Games

A. Hit mouse B. Memory Testing C. Percussion



12. Settings

swipe to scroll through different setting items. You can adjust the following items:

- (A)Volume
- (B)Brightness
- (C)Date
- (D)Time
- (E)Advanced
- (i)Memory

· Allow to check the free memory left

· Watch Memory and Micro SD Card Memory

Swipe the screen and tap the icon to choose where to storage the data, once the icon turns green, the selected option is active.

Note:

· If you "FORMAT", this will erase all data in the memory,

(ii)Image Display:2 options for displaying the image

(iii)Video Resolution

(iv) Auto Screen Off:5 options

(v) Factory Reset


Factory Reset will erase the contents stored in the memory and reset all system settings to factory default.

(vi) Languages

Clock face

Tap the screen to choose analog or digital clock face.

Swipe to choose clock faces.

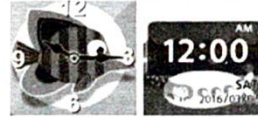

CARE, MAINTENANCE & CAUTIONS:

- Keep Smart Watch in dry place and away from heat.
- Keep the rubber cover of the micro USB port closed tightly
- Keep the lens clean.
- Do not drop the watch and immerse in water.
- Avoid using the device near strong magnetic fields.
- Clean it with a dry and soft and clean cloth.

NOTICE:

This device complies with Part 15 of the FCC Rules.

This product conforms to safety requirements of ASTM F963. This product conforms to PROP 65.

This product conforms to the EMC-Requirements as laid down by the Council directive 89/336/EEC

This is an electrical/electronic product and MUST not be disposed of in normal waste bins. When you wish to dispose of it please discard it at a collection point for electrical/electronic scrap.