


# Smart Watch User Guide

1

## 1. Notes

### 1.1 Product detail

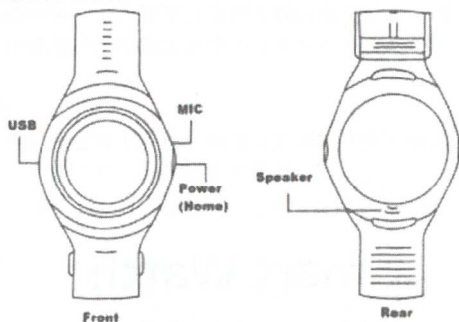

### 1.2 Product quick into

**Power key:** Power on/off, awaken /turn off screen, back to home screen.


**USB:** Charging /Data

**Touch Screen:** Each function (main menu) will be shown and displayed on capacitive touch screen. You can enter into Home screen when you press the power button. Press power button twice, the watch in clock mode, you can set the different clock interfaces when you click the middle screen for long time.

Sliding from up to down on main screen , you can entre shortcut functions setting interface and set

the Bluetooth music , airplane mode, brightness adjusting . You can enter into main menu and show functions icons when you sliding left and right on the screen.

Home screen:

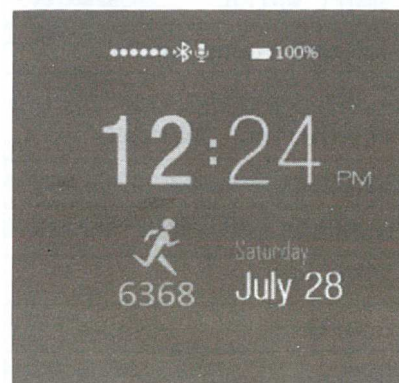

Menu interface:



## Clock Display Setting

How to switch the clock interface: Hold down the clock screen, you can choose.

### 1.3 Specification

Name	Smart watch
LCD	1.2inch round screen
Display	Touch screen, resolution: 240*240
CPU	MT6261
Frequency	GSM 850/900/1800/1900MHz
Memory	32Mb+32Mb
Battery	320mAh
Bluetooth	BT3.0
Pedometer	Support
Sleep monitor	Support

## 2. Product Quickly Use

### 2.1 Download the software

Download the App-FunRun after scan the QR code via QQ or third-party Android market, or search the App 'FunRun', or scan the QR code from the

4

Notice: Please don't shut the Bluetooth notify when you are clearing software by background or close background software. It will affect the Sync function between watch and phone if shut it.

### 2.3 Bluetooth connectivity and sync function

#### 2.3.1 From phone to watch

Condition: Make sure the Bluetooth open and can be checked.

#### Connectivity from phone to watch

Enter the phone setting, turn on Bluetooth search for device, choose the Bluetooth name of watch and click to pair.

#### Connectivity from watch to phone

Enter the watch setting, turn on Bluetooth search for device, choose the Bluetooth name of phone and click to pair.

**What is connectivity successful between the phone and watch: they can find each other ( You can looking for the phone via anti-lost function**

product.



Notice: This App only use for sync between the watch and phone.

If you already download the related software, please check the version and use the newest one.

### 2.2 App installation

#### 2.2.1 Android App installation

After you installing the App, you will find the



FunRun icon on your phone:

#### 2.2.2 Android App installation

Enter APP, choose 'Bluetooth service' and let all the notification app are on default.

Enter App, please choose and click the 'Funrun', then additional functions of Funrun will be used.

5

**and find the phone successfully).**

## 3. Basic Function

### 3.1 Dialer

Input the phone number to dialer from smart watch.

### 3.2 Message

Sync phone or watch message.

### 3.3 Call records

You can check your phone call records after you connect with the Bluetooth. Show all records including miss call, dialed calls and receive call.

### 3.4 Contacts

Sync contacts to watch from the phone.

### 3.5 Bluetooth

Let the Bluetooth on /off, and visible function on /off. You can check the Bluetooth name and address.

### 3.6 BT dialer

Paired devices from smart watch.

### 3.7 Remote Notified

When there is SMS, incoming messages from QQ and other applications on the connected phone,

6

7



the watch phone will alert you to read them.

### 3.8 Remote Camera

Use phone camera take pictures; but remote by watch, its need switch on the camera of phone in advance.

### 3.9 Music player

Control the music's playing from smart watch via Bluetooth.

### 3.10 Anti -lost

Watch seek phone or phone seek watch.

### 3.11 Setting

**In the setting of Watch, you can set the time, theme, language, gesture and factory data reset.**

### 3.12 Pedometer

It can be adopted as a tool to avoid insufficient or excessive, exercise by measuring calories of calories consumption based on collected data, such as number of steps, distance, speed, time. Even to control exercise.

**Note: if you want to return to main menu but keep pedometer during the exercise, please Don't click the pause or reset, you only should press the power button.**

### 3.17 Alarm

### 3.18 Calendar

### 3.19 Stop-watch

### 3.20 Calculator

### 3.21 Motor

### 3.22 Theme

### 3.23 Recorder

### 3.24 World Time

### 3.25 Power Saving Mode

### 3.26 Profiles

### 3.27 File Manager

## 4 Notice

4.7 Full charge before use, the charge time need 1-2hours.

4.8 Use the accessories cable and charger, or your android phone accessories.

4.9 Bluetooth will disconnect when The smartwatch exceed the distance, after switch on the anti- lost, the smart search function can't be use before reconnect with blue tooth.

4.10 Please reconnect with BT if it's disconnected occasionally (please connect afresh if the Bluetooth over 5minutes). Please agree the phone

### 3.13 Sleep Monitor

Show your sleep quality base on your sleep time, you should wire the watch on your hands during you sleeping and click the "start ".

**Note: if you want to return to main menu but keep sleep monitor, please**

**Don't click the pause or reset, you only should press the power button.**

### 3.14 Sedentary Remind

You can set a time to remind you up to do some exercise, we suggest once in one hour at least.

**Remark: Pedometer, Sleep monitor and Sedentary can't be enabled at the same time.**

**You should shut down other two functions when you use one function.**

### 3.15 Cardiogram

It can measure and show the dynamic change of heart rate. Please ensure the watch be suit to your arm. The indicator light will be on when measuring.

### 3.16 QR code

**Download the Fundo APP from the third part android market or scan the QR code via QQ.**

book sync otherwise there is no called phone book.

4.11 When playing the music, some of music's name can be shown or not. It is normal, because of different Android phone.

## 5 Common Trouble shooting

Please refer below key function for any problems with the watch. If the problem is still unsolved, please contact with our dealer or serviceman appointed.

### 5.7 Unable to switch on

The time of press the power button too short, please keep it more than 3 seconds.

Low power, please charge it.

### 5.8 Shut down automatic

Low power, please charge the watch.

### 5.9 Using time too short

Battery is not full, please make sure it is full power (full charge need 2 hours at lease).

During the use of SIM card, the power will be run off soon if the signal too poor.

### 5.10 Unable to charge

The battery's life will be reduce after few years,

please check if the battery are work.  
Change a new charger if it is unworkable.  
Please check the USB slot connecting good, if no,  
please try again.

5.11 Not caller's name when incoming call  
Forgot to choose upload the phone book when  
connected with BT, or unselected keep upload the  
phone book.

Forgot to sync the phone book when reconnected,  
please pair the device and connect BT again.

5.12 Bad phone call voice

Watch and phone are separated too far, please be  
closer.