Thank you for choosing our company smart watches. You can read this manual to have a comprehensive understanding of the using of device, and operate it simply. The company reserves the right to amend the contents of this manual without prior notice.

Package: one gift box, one user manual, one smart watch, and one charging cable.

Warning: This smart watch supports IP68 waterproof, you are able to get wet in the rain or wash hands with it, but please note that the USB plug and SIM slot is fastened, and do not press any button while the watch in the water,

or there no warrantee is supported.

• Charging: Magnetic cable charge, as following image show, put the changer onto the 4 pin to start the charging, 120 mins later the watch full charged.

△Notice that the cable end not allowed 2 pins connect with some conducting material, or it might burn.



• SIM insert: The device support GSM 2G voice call, support WCDMA 3G network, not support CDMA 3G network; Nano size SIM card support. Under powered off condition, open the SIM slot cover out, insert the SIM as following picture shown direction and position, press the SIM to popup the SIM out, use tweezer take the SIM out ig necessary. Please note that keep the SIM slot cover tightly sealed always, otherwise it may affect the waterproof performance as unexpected.



## Operation Guide;

Power ON/OFF: Long press to switch the device; short press in others interface briefly to back to the standby screen.

TP gesture operation; After enter each function, slip right to back last interface, slip left to enter next menu.

Watch face switch: Long press the watch face center, slip right or left for more watch faces choice, tap to choose and confirm it.

Third part Apps display size switch: When using third part Apps, long press Power Button enter the switch menu, the size change switch on the top of the screen, choose it what you prefer.



• Status bar: At standby page, slip down to have the status bar.

Left: Connection assistant/setting/SOS/Flight mode;

Center: Battery/Signal/Cellular/WIFI; Right:Notification/RecentTask/Bluetooth/Brightness.







• Multi-sports: Slip right enter multi-sport mode, includes Walling, Running, Mountain, Half Marathon, Full Marathon etc. choose one to enter and wait for the GPS confirm, choose yes to have the movements locus.



Slip up at Standby page: There are 6 functions includeCompass/Sleepmonitor/Pedometer/HeartRate/Air pressure/Altitude.









- Recent task: Clear the recent tasks to release the RAM to help device running faster.
- SOS: Under the watch connected with phone, setup SOS cellphone number in "Funfit" App, tap SOS in the watch to make the call.
- Notification: All the notifications show on the standby page, tap one to enter full display.
- Main menu: Slip left at standby page enter main menu.
- Heart Rate: Auto start measuring after 3 seconds when enter, default is dynamic heart

rate, tap to enter history, slip right return.

- Compass: Need calibration first, then guide you correct direction.
- Sleep monitor: Automatic turn on at 9:00PM and turn off at 9:00AM every day, record your sleep status.
- Pedometer: Includes steps and distance data, restore data and restart at 0 o'clock every night.
- Barothermograph: Under networks connected condition, through GPS locating, get local weather data.
- Altitude: Under networks connected condition, through GPS locating, get local altitude data

- Bluetooth: Main Menu-Setting-Internet Connection –Bluetooth, turn on Bluetooth, tap Search for devices, then choose the device which needed, tap connect; if use other device search H1 watch, need turn on visible.
- Wi-Fi: Main Menu-Setting-Network Connection-WLAN, choose your Wi-Fi name and type the password to connect.
- Notifications: Sync cellphone all the notifications, such as Facebook, WhatsApp, Messenger etc.
- Android Assistant: Includes Remote Music/Find my phone/Lock the phone/Remotecamera/Connection management/Funfit download.

- Remote Camera: under the phone standby page, tap watch end remote camera to open the phone camera, tap watch to shot the photo by phone, restore in the phone.
- Remote Music: Remote control cellphone music player, support Android phone only.
- Music Player: Main Menu-Audio Center-Music.
- Setting: All the settings about this device. •
- Camera: The watch local shot, restore in the watch.
- •Apps Download: This device is running Android 4.4OS, it is able to download all the Apps in Android platform, support Google Play store and Browser search download, new Apps

in Main Menu-More.

• OTA: Main Menu-Setting-About Watch-Wireless Update-Check for updates, ensure the watch battery is more than 80%.

Due to Bluetooth protocol is different between all the mobile phone brands. Sometimes the Bluetooth connection will be instability between mobile phone and smart watch. Please turn off the Bluetooth, then reconnect. If the smart watch stops working, please press the power key for 10 seconds to restart the smart watch.

Watch connect to Cellphone, need download

the Apps "FunFit" in the cellphone at very first

•Android Phone: Scan the QR code in the watch (Main menu-Android Assistant-Funfit) or following QR code image to Download Funfit.



1 After installed Funfit, turn on both watch and phone Bluetooth, slip down watch end find the connect phone icon as below image shown, tap enter Android phone connection, tap the QR code.



2 Open Funfit at cellphone end, enable the notification first, back to Funfit tap More-Connect Watch-Scan it, then scan the watch end QR code page, both watch and phone remind pairing, tap OK to connect them successfully.





- iPhone: Apps store search "Funfit" download and install, Open "Funfit" and turn on Bluetooth at phone end.
- 1 Slip down watch –enter status bar-slip left find connect iPhone icon as below image shown-turn on the switch button.
- 2 iPhone end Funfit page-tap More—Connect Watch-Search-New device show as H1, tap H1, both watch and iPhone show pairing reminder, tap pair to connect them successfully.



 Data Sync: Pedometer, Sleep monitor, heart rate need manually click left top Sync icon to sync all the date from the watch to the phone Funfit apps; Multi-sport data need slip left in the Funfit page enter sports and tap the walking icon to sync.



## Warranty

- 1. If it appears quality problems caused by manufacturing, materials, design within one year (since the day of purchase), battery and cable within 6 months. we will offer free warranty. Premise is using normally and correctly.
- 2. About the fault caused by the user's personal reasons, we don't offer free warranty, as follows:
- 1). Disassemble or refit the product.
- 2). Caused by immodesty drop
- 3). All artificial damage or misuse (such as: make water into the host, the external force shatter, scratch damage of peripheral

- components, etc.), all these are beyond the scope of the warranty.
- 3. When ask for free warranty, you must provide a warranty card with the seal of purchase place and purchase date.
- 4. If you met problems during use, please contact the shop customer service which you bought from.
- 5. Please make the final products as the standard.

Date of purchase:

IMEI code:

Buy store: