


Product instructions

Thank you for using the Smart watch.

The product manual includes product functions, usage and operation process. Please read carefully to achieve the best experience to prevent unnecessary damage. Please do not change the parts of the product randomly, disassemble and install the product, resulting in beyond the warranty scope. The box contain 1 Smart watch, 1 USB cable, 1 user manual.

Smart Watch composition introduction

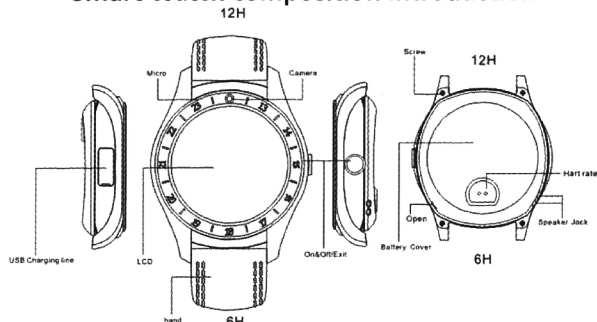

一、The shortcut menu operation guide: after taking the new machine, you should charge fully, then insert SIM card.



1、Standby interface, Click the call, heart rate and information icon. Can enter the corresponding menu for dialing, heart rate testing and message functions.

2、Personalized dial



Press the button to enter the interface of the dial, touch the middle of the dial,



7. Calculator Touch this icon to enter the calculator menu.



8. HeartRate Touch this icon to enter the Heart Rate menu.



9. Messaging Touch this icon to enter the messaging menu.



10. Treasure box Touch this icon to enter the Treasure box menu. When you enter the menu, you will see the remote notification, Bluetooth, anti-loss, file management, recording, scene mode and other functions.



11. Application Touch this icon to enter the Application menu.

三、Bluetooth pairing connects to android phones.

1. Touch the screen to enter the interface of the treasure box and open the Bluetooth.

四、Open the Bluetooth from your Smart Watch and Smart phone, Click and search Bluetooth device on the watch and connect it. Or search the Bluetooth of the watch on the Smart phone and connect it.

五、Open the Bluetooth notice, choose what you need to sync item by item settings, such as: click into the synchronization Settings, you can be set according to the personal Settings required for SMS, contacts, phone records, schedules, such as information and mobile phone synchronization, set up good function will inform centre synchronous push to all of the watches.

Warm tips: due to different setting from users' mobile phone, the first time you connect to the mobile phone, it may not be able to connect. When this happens, please turn off the Bluetooth of the watch and phone, restart the machine or restore the factory Settings.

The whole Smart Watch introductions briefly
Start/stop button, short press to return screen. Long press to turn off.

and switch back and forth between the three dial.

二、The main menu operating guidelines .



1. Dialer Touch the icon to dial the phone directly when you insert SIM card. You can make a call while connect your cellphone via Bluetooth.



2. Entertainment Touch this icon, there are Alarm, music player, pedometer, sedentary reminder, photo album and other functions.



3. Settings Touch this icon, there are QR code, watch Settings, security Settings, notification Settings, call Settings, restore factory Settings, call records and other functions.



4. Calendar Touch this icon to enter the calendar menu.



5. Camera Touch this icon to enter the camera menu.



6. Phonebook Touch this icon to enter the phone book menu. When the SIM card is inserted, there is a corresponding phone book, and when it is synchronized with the phone, there is a phone book record. This function requires the watch and Smartphone to be connected before it can be used.

Return key/hang key, click return to the upper menu and hang key. Confirm/answer key. The standby interface enters the main menu, which is the confirmation key in the main menu and the answer key in the incoming call.

Do not block this hole when talking with microphone.

USB port~charging .

Do not block this hole when talking with speaker.

六、Trouble shooting

1. The watch doesn't work.

Press the start button too short, please press the button for more than 3 seconds.

The battery is too low, please charge it with the USB cable.

2. The watch will turn off by itself

The battery is too low, please charge it with the USB cable.

3. The watch has a short standby time

The battery is not fully charged, please make sure there is enough charging time (less than 2 hours).

Use a SIM card, but the signal of location is poor, resulting in high current.

4. The watch doesn't charge properly

Please check whether the battery is usable and the performance of the battery will be reduced after too long use.

If the charger is working normally, you can try to replace it.

Whether the charging connection USB cable interface is well connected, you can try again.

5. The caller's name was not shown when the call was received

Exclude the smart watch and mobile phone distance too far, please close it. Do not check to upload the address book.

When disconnected, the address book is not synchronized. Please reconnect by pairing.

6. The voice quality of the call is not very good

Bluetooth signal is bad.

If the signal on the watch is not good, replace it with a place to answer the phone.

With Bluetooth notification software installed, android phone users can use a browser to scan the QRcode in the watch Settings. Download the corresponding APP and install it.

The battery of this product can be disassembled, the battery cover can be opened, the battery can be taken out, SIM card and TF card can be inserted.

Due to the loss of the product itself, the battery may not be able to start up after being idle for more than a month due to lack of battery power. Please charge yourself.

The default factory reset password is 1122.