 


# LCD04 Writing and Drawing Tablet



## Instruction Manual

### Tablet Parts

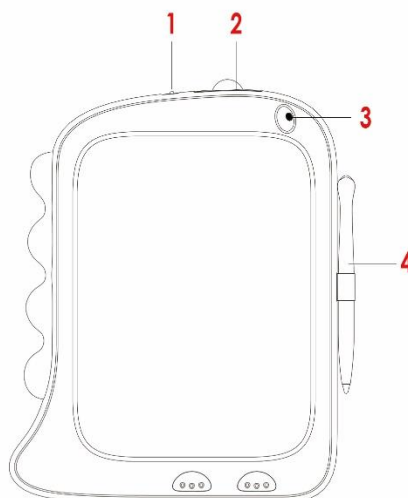

1. Deletion lock

2. Battery compartment

3. Delete button


4. Stylus pen

## Mode of use

- For a better writing experience and to avoid damage to the screen surface, use the stylus included with this product.
- One-click erase your drawings and notes by pressing the erase button.

## Lock button


Slide the switch to the right to lock the erasure to prevent erasing the contents of the screen by mistake and to the left to allow erasing.

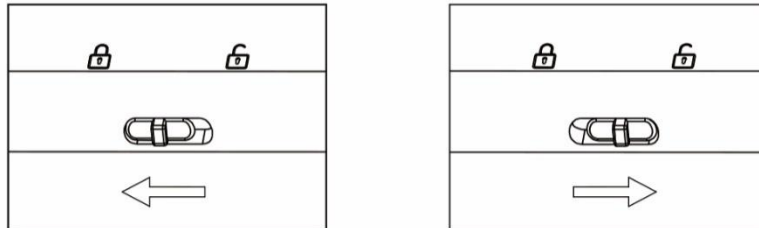


Note: The lock switch is disabled at the factory.

## Batería


The battery used in this unit is not rechargeable; the battery must be inserted with the correct polarity; the dead battery must be removed from the toy; the power terminals must not be short-circuited; the type of battery that can be used is a 3V DC button cell battery. Refer to the following replacement sequence indicator to remove and insert the battery:

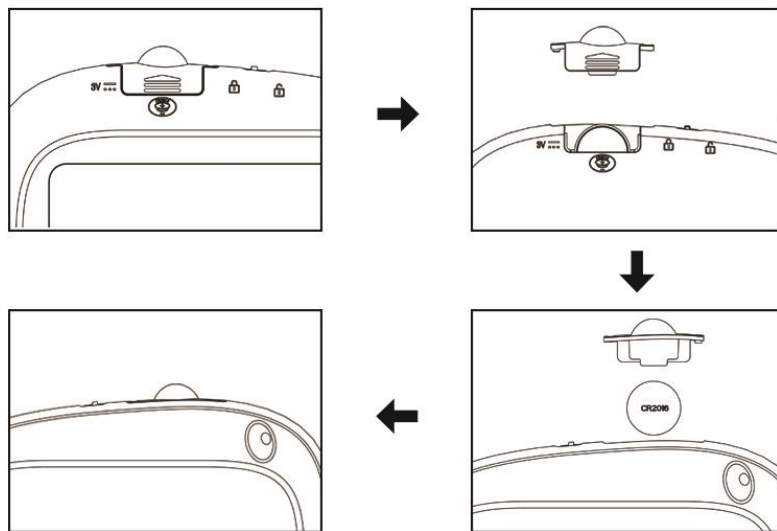

**Battery replacement:** Remove the safety screw and remove the battery holder, remove the battery, insert a new CR 2016 [3V] button cell battery and insert the battery holder back into the slot.

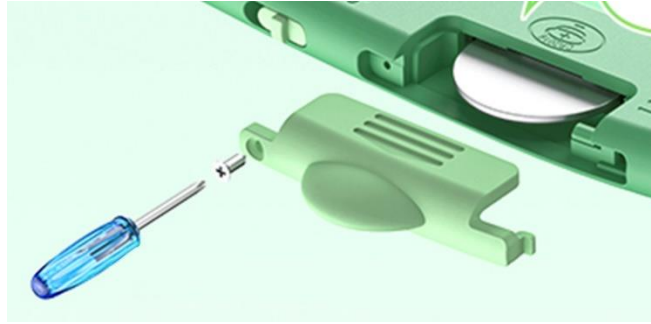

## Maintenance

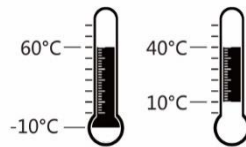

Cleaning method: Clean only with a soft cloth without detergents or chemicals.

Storage temperature: -10°C - 60°C (-10°C - 140°F - 60°C)

Operating temperature: 10°C - 40°C

## Warning



- Do not use excessive pressure or use items that may damage the display.
- This product CANNOT transfer data with other electronic devices.
- This product is not water resistant, avoid use in humid environments.
- Avoid prolonged exposure to direct sunlight.

## Precautions

- This product contains small parts and is not suitable for children 3 years of age or younger.
- Do not disassemble this device without authorization.