

## Mini Bluetooth portable thermal printer - AT0036




### Instruction manual

Please read the instructions carefully before using this product. Specifications are for reference only, the physical product may vary slightly from what is shown in this manual.

#### **Brief introduction**

Welcome and thank you for choosing our products, in order to understand and use our products more quickly, it is recommended that you read this manual carefully before use, and keep it properly for future reference. The warnings and cautions in the instruction manual should be observed. If there are any reference errors, we hope users understand that the design content may be changed without prior notice. This product has a unique shape, exquisite design; it is an easy-to-operate digital printer, designed for children to learn more, play with imagination and have fun through experience.

#### **Key/interface specification**

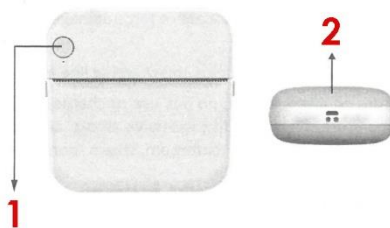


1. Long press: Power button, 2. USB charging port

Please fully charge and unplug the charger before first use.

## Use the assistant

1. First use: please charge first, long press the power key 3 seconds to start.

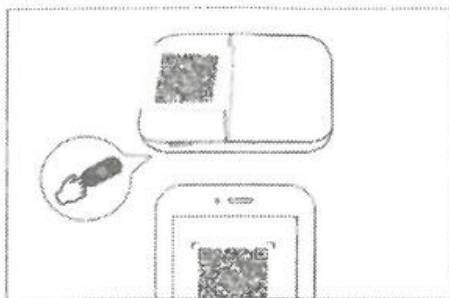

2. Scan the QR code or search through the Apple store or Google Play for the APP “Fun print”, download and install it.




Fun print


3. With Bluetooth enabled on your cell phone, use the downloaded application to connect to the Bluetooth printer in the “My device” tab bar. After the connection is successful, you will be able to print.

## Paper substitution


1. Remove the old roll of paper and place the new one in the direction indicated. (Note: The new thermal paper needs to be exposed outward about 2 cm so that the printer can automatically lay out the paper when it starts up).

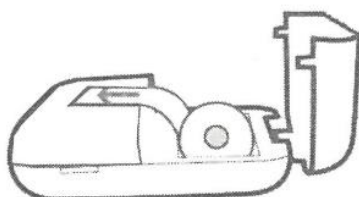

2. Close the printer cover, the machine will automatically dispose of the paper.

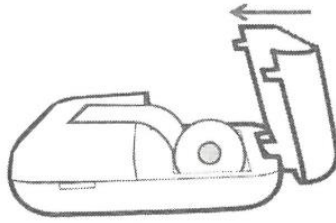

3. Once the above steps have been performed correctly, the machine can print normally.

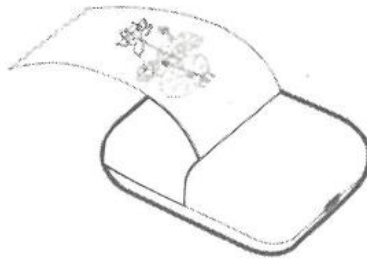

### **Battery warning**

1. Please use a 5V charger to charge according to the standard specification to avoid damage to the device.
2. It is forbidden to disassemble the battery, impact, extrusion or fire.
3. If severe bulging of the battery occurs, do not continue to use the printer.
4. Do not expose the equipment to high temperature environments, the use of the battery after any accidental immersion or any direct exposure to liquids is prohibited.
5. Replacement with the wrong type of battery may be explosive; be sure to follow the instructions for disposing of used batteries in accordance with the environmental regulations in force.

### **Matters requiring attention**

1. The printing intensity can be controlled through the APP 1. When charging, please insert and remove the charging cable carefully and subtly in order to avoid excessive force and damage to the charging port.
2. After charging, unplug the charging cable timely.
3. To avoid hazards, do not use or charge the printer in environments with high temperature, humidity, smoke and dust, such as bathrooms, steam rooms, fireplaces, etc.
4. Incorrect charging may damage the print head.
5. Do not touch the print head to avoid overheating and burns.
6. The edge of the print paper is often sharp, be careful when handling it.

## Print configuration

The intensity of the impression can be controlled through the APP in the section: Concentration or as shown in the image below. The concentration setting can be set to Shallow, Moderate or Deep.

