



Wireless speaker and karaoke microphones

YS-219

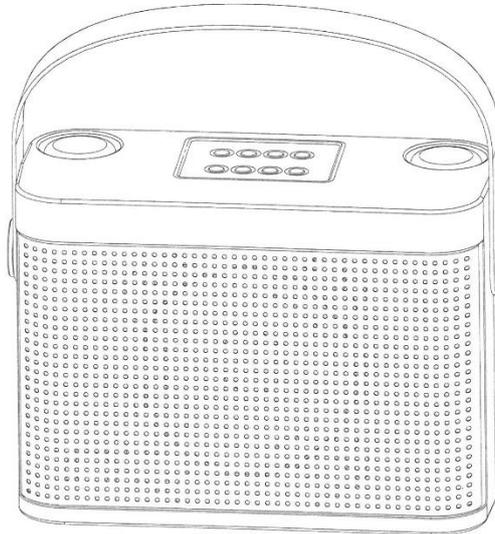

User's manual

Parts and controls

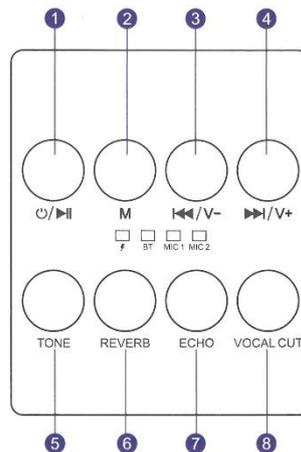

1. On/Pause

2. Mode

3. Previous track/Volume (-)


4. Next track/Volume (+)

5. Change pitch

6. Reverb effect

7. Echo effect

8. Vocal cut

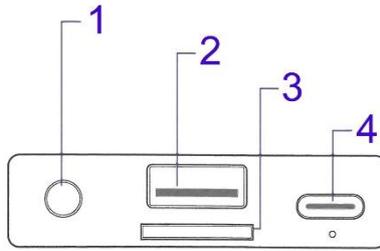


1. Auxiliary input port

2. USB device input port

3. TF (Micro SD) card slot

4. Charging port

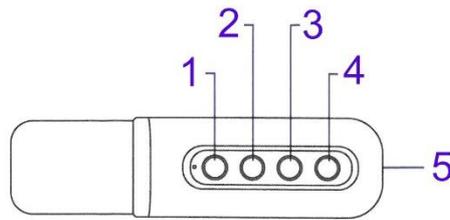


1. Sound effects

2. Volume (+)

3. Volume (-)

4. Power ON/OFF

5. Charging port

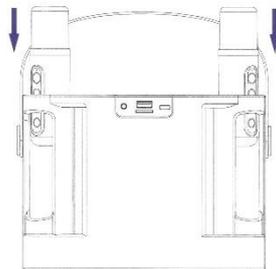

Details of the function of the buttons

On/Pause: Press and hold to turn the power on or off. Press to pause or play music.

Previous track/Volume - & Next track/Volume +: Press to select the previous/next track. Press and hold to adjust the volume.

Mode button: Press to switch between Bluetooth mode, USB flash drive mode, MicroSD (TF) card mode and AUX mode.

Vocal cut: Press to remove vocals from a song and leave only the background music.

Reverb/Echo sound effects: Press to choose the corresponding sound effect. The default is the Echo sound effect.

Change tone: Press to switch between the original, male, female, child and magic sound effect.

How to use

Bluetooth function

1. Turn on the speakerphone: Press and hold the power button to turn on the speakerphone. The BT indicator will start flashing.

2. Bluetooth connection: Turn on the Bluetooth on your smartphone. In the Bluetooth settings, search for the device name "YSD Speaker" and pair it.

The speaker will beep if the pairing is complete and the BT indicator will show continuously on.

3. Turn on the microphone: Press and hold the power button on the microphone.

The microphone will connect to the speaker automatically and the corresponding indicator on the speaker will light up.

4. Adjust the sound effect: Adjust the volume of the speaker and microphones, choose the appropriate sound effects.

5. Play music: Open a music app on your smartphone and play the music you want. The music volume can also be adjusted on the phone. By pressing the vocal cut button you can remove vocals from the song.

Note: Once you pair the speaker with your smartphone via Bluetooth, it will automatically pair the next time you use it. Bluetooth can be turned off in your phone's Bluetooth settings.

How to charge

1. When the battery is low. The device will automatically turn off.

2. Connect a 5V DC charger to the charging connector to charge the speaker or microphones. The charging indicator will turn red when charging and will turn off when fully charged.

3. It will take about 3 hours to fully charge the speaker and 1 hour for the microphone. Then they can work for 3-5 hours.

Parameters

Frequency range: 20Hz-20kHz

Maximum sound level: >115dB, 1kHz, THD<1%.

Power supply: built-in lithium-ion battery

Charging voltage: DC 5V