
Dobe controller compatible with PS4



User's manual

Control design

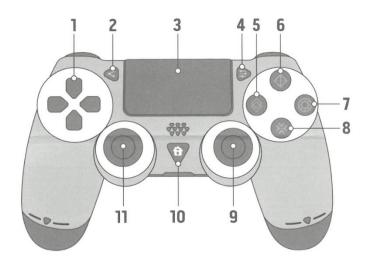


1. Direction pad

- 2. SHARE button
- 3. Tactil panel

4. Options button

- 5,6,7 and 8. Function buttons
- 9. Right stick / R3 button (Press down to use as R3 button)
- 10. HOME button

11. Left lever / L3 button (Press downward to use as L3 button).

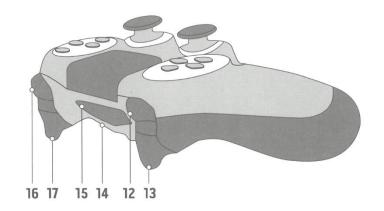

12. L1 button

13. L2 button


14. Micro USB port

15. LED light bar

16. R1 button

17. R2 button.

Pairing the controller and the console

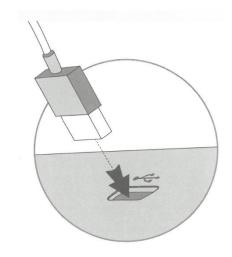

- 1. Turn on the PS4 console.
- 2. Connect the controller to the console using the USB-A to MICRO USB cable.
- 3. The controller will turn on and the LED light bar will flash to indicate that it is connecting to the console. Once the LED light is steady, the controller has successfully connected to the console.

Product description

The PS4 Wireless Controller is compatible with PS4, Slim and Pro consoles. Designed with an ergonomic grip, integrated light bar, built-in speakers and a 3.5mm stereo audio jack; the PS4 Wireless Controller is the perfect companion for your PS4 gaming experience.

It features Bluetooth wireless connectivity, motion sensing technology, dual vibration motors, touchpad and a rechargeable battery with a USB-A to Micro USB cable.

Product care and safety

- Retain the user manual for future reference.
- Use this device only for its intended purpose.
- For indoor use only.
- Keep away from very hot or cold surfaces.
- When not in use, store in a cool, dry place away from direct sunlight.
- Do not apply force or place heavy objects on the PS4 Wireless Controller.
- If the PS4 Wireless Controller is damaged, broken or has been submerged in water, stop using it immediately.
- Do not attempt to repair, modify or disassemble the PS4 Wireless Controller.
- Clean the PS4 Wireless Controller with a soft, damp cloth to avoid dirt build-up. Do not use chemical solvents, detergents or alcohol.
- Keep out of the reach of small children.

Specifications

Input voltage: DC 5V

Working current (without vibration): < 60mA

Working current (with vibration): < 120mA

Battery capacity: 650mAh

Paired code current: 820mA

USB-A to Micro USB cable length: 80 cm

Product size: 155 x 100 x 55 mm

Product weight: 187 g