

6252_ALTAVOZ TIRKO


FRONT PART

6252_Altavoz Tirko Manual de instrucciones (Esp)



Recomendamos que lea detenidamente este manual de instrucciones y lo conserve para futuras consultas.

Descripción del Producto:

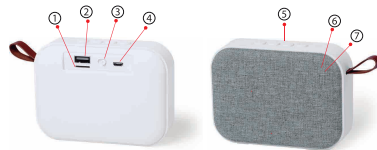

1. Tarjeta Micro SD
2. Puerto USB
3. Botón encendido/apagado
4. Entrada Micro USB
5. Controles
6. Micrófono
7. Luz indicadora

Especificaciones:

- Versión Bluetooth 5.0
- Voltaje de carga: 5V
- Batería de Litio 400mAh, 3.7V
- Tiempo en funcionamiento: Hasta 3h
- Distancia de funcionamiento: Hasta 10 metros
- Frecuencia: 80Hz-20KHz
- Impedancia: 4ohms
- Potencia: 3W
- THD: menos del 5%
- SNR: 85dB
- SOPORTA Tarjetas Micro SD de hasta 32GB

Funcionamiento:

Sitúe el botón de encendido en la posición "ON" para encender el altavoz. La luz comenzará a parpadear, lo que indica que el dispositivo está listo para ser emparejado.

Sitúe el botón de encendido en la posición "OFF" para apagar el altavoz.

Reproducir música vía Bluetooth:

Desde el menú Bluetooth de su dispositivo, busque nuevos dispositivos y seleccione "6252" para asociarlo a su teléfono. Una vez asociados correctamente, oírán un sonido de confirmación y la luz permanecerá fija.

Reproducir música desde la tarjeta micro SD / Memoria USB:

Inserte una tarjeta Micro SD / Memoria USB en la ranura correspondiente y el altavoz reproducirá automáticamente la música de la misma.

Entrada de Audio (Aux):

Inserte el cable Micro USB en el puerto Micro USB del dispositivo, y conecte la conexión Jack 3.5mm en su reproductor mp3 / mp4 / teléfono móvil u otro dispositivo compatible para reproducir música.

Radio FM:

Inserte el cable Micro USB en el puerto Micro USB del altavoz, el cuál funcionará como antena. Pulse ► y el altavoz buscará automáticamente las emisoras de radio disponibles. Pulse ←/+ para cambiar de emisora.

Carga:

Utilice para la carga el cable suministrado. Conecte el cable USB a su ordenador/adaptador de corriente alterna. Conecte el otro extremo del cable con conexión Micro USB en el puerto Micro USB del dispositivo.

Durante el proceso de carga, el indicador luminoso en color rojo permanecerá encendido. Cuando el proceso de carga haya finalizado, el indicador LED se apagará.

Controles:

+	<ul style="list-style-type: none"> • Pulse una vez para pasar a la siguiente pista. • Mantenga pulsado para subir el volumen. (Oírán un sonido de confirmación cuando se alcance el máximo)
-	<ul style="list-style-type: none"> • Pulse una vez para retroceder a la pista anterior. • Mantenga pulsado para bajar el volumen.
►	<ul style="list-style-type: none"> • Pulse una vez para responder/colgar una llamada. • Pulse una vez para reproducir/pausar la música. • Mantenga pulsado para rechazar una llamada. • Pulse dos veces de forma consecutiva para marcar el número de la última llamada.
M	<ul style="list-style-type: none"> • Pulse para cambiar de función (Bluetooth / FM Radio / Tarjeta Micro SD / Memoria USB / Modo Aux)

Solución de problemas:

Fallo	Solución
Imposible conectarse a otros dispositivos.	<ol style="list-style-type: none"> 1. Revisar si el altavoz sigue en el proceso de búsqueda. Apáguelo y enciéndalo nuevamente. 2. Hay demasiados dispositivos Bluetooth alrededor que causan dificultad en la conexión. Por favor desconéctelos. 3. Asegúrese de que está en "modo asociación".
El sonido es bajo o distorsionado.	<ol style="list-style-type: none"> 4. Revise el volumen de su dispositivo y ajústelo a un nivel adecuado. 5. Recargue la batería.
La música se detiene de vez en cuando.	<ol style="list-style-type: none"> 6. Revise si la distancia efectiva de transmisión del altavoz es excesiva o si existe algún obstáculo entre el altavoz y el dispositivo Bluetooth.

Advertencias:

1. No lo exponga a la lluvia o entornos mojados.
2. Evite caídas que le puedan generar daños serios.
3. No intente reparar la unidad por sí mismo, contacte con un especialista.
4. Para evitar riesgos, no se deshaga de él de manera inapropiada ya que posee una batería de litio integrada.
5. Limpíelo con un trapo seco.
6. No lo instale cerca de fuentes de calor o luz solar directa.
7. No inserte ningún objeto metálico en la unidad, existirá la posibilidad de un cortocircuito.
8. Mantenga fuera del alcance de los niños.



El símbolo de referencia tanto en el producto como en su manual de usuario, indica que al final de la vida útil de los aparatos eléctricos y/o electrónicos, éstos deberán reciclarse por separado de sus residuos domésticos. Existen medios adecuados para recoger este tipo de material para su correcto reciclaje. Para obtener más información, póngase en contacto con la autoridad local.

Por la presente, Mtko Catal Importaciones S.L. declara que este equipo radioeléctrico es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en: www.mkto.es (busque por referencia).



MADE IN PRC

MKTO CATAL IMPORTACIONES S.L. B04267225
Ctra. De Huerca-Overa, s/n, 04640, Pulpi, Almería, Spain.

BACK PART

6252_Speaker Tirko User Manual (Eng)



It is recommended to read this user manual carefully and keep it for future reference.

Product Overview:



1. Micro SD Card Slot
2. USB port
3. ON/OFF Button
4. Micro USB Input
5. Controls
6. Microphone
7. Indicator light

Specifications:

- Bluetooth version 5.0
- Charging voltage: 5V
- Lithium battery 400mAh 3.7V
- Working Time: up to 3h
- Operating distance: up to 10 meters
- Frequency: 80Hz-20KHz
- Impedance: 4ohms
- Power output: 3W
- THD: less than 5%
- SNR: 85dB
- Micro SD card: up to 32GB

Operation:

Switch ON/OFF button to "ON" position to power on the speaker. The indicator light will start flashing to indicate that the device is ready to be paired.

Switch ON/OFF button to "OFF" position to power off the speaker.

Playing Music via Bluetooth:

From the Bluetooth menu of your device, search for new devices and select "6252" to pair. Once they are paired successfully, you will hear a notification sound and the light will stay on.

Playing Music via Micro SD Card / USB Flash Drive:

When u insert a micro SD card / USB flash drive into the micro SD card / USB flash drive slot, the music will automatically start playing.

Audio Input (AUX):

Insert the Micro USB cable into the Micro USB port, and insert the 3.5mm jack into your mp3/mp4 player/mobile phone or other compatible device to play the music.

FM Radio:

Connect the Micro USB cable into the Micro USB port to work as an antenna. Short press ► and the speaker will automatically search for radio channels. Short press ←/+ to change the channel.

Charging:

Use the cable provided for charging. Connect the USB cable to computer / AC adapter. Connect the Micro USB end of this cable into the Micro USB port of your device.

During charging, the red indicator light will stay on. When the speaker is fully charged the indicator light will turn off.

Controls:

+	<ul style="list-style-type: none"> • Short-press the button to next song. • Long-press the button to increase the volume. (When maximum volume is reached, you will hear a notification sound)
-	<ul style="list-style-type: none"> • Short-press the button to previous song. • Long-press the button to decrease the volume.
►	<ul style="list-style-type: none"> • Short-press the button to answer/end a call. • Short-press the button to play/pause the music. • Long press the button to reject an incoming call. • Short press twice consecutively to redial the last phone number.
M	<ul style="list-style-type: none"> • Short press to change the function (Bluetooth / FM Radio / Micro SD card / USB flash drive / Aux Mode).

Troubleshooting:

Fault	Solution
Unable to pair with other devices.	<ol style="list-style-type: none"> 1. Check whether the speaker is still in the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your device is in "Pairing Mode".
The sound is low or distorted.	<ol style="list-style-type: none"> 4. Check the Bluetooth device volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	<ol style="list-style-type: none"> 6. Check whether the speaker effective transmission range is exceeded or if there is an obstacle between the speaker and other Bluetooth devices.

Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately as there is a built-in Lithium battery.
5. Clean the speaker with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Keep out of reach of children.



This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

Hereby, Mtko Catal Importaciones S.L. declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the UE declaration of conformity is available at: www.mkto.es (search on reference).



MADE IN PRC

MKTO CATAL IMPORTACIONES S.L. B04267225
Ctra. De Huerca-Overa, s/n, 04640, Pulpi, Almería, Spain.