

PORTABLE SHAVER – AR0137



Instructions for use

Product Specifications

Product Name: Portable shaver

Product Model: TXD-006

Charge input: 5V - 1A

Operating Voltage: 3.7V

Rated input power: 5W

Charging time: About 2 hours


Full charge life time: About 60 minutes

Product Size: 40*40*71mm

Product Material: ABS + Aluminum alloy

Implementation standard: GB 4706.1-2005/GB 4706.9-2008

Product Structure Diagram

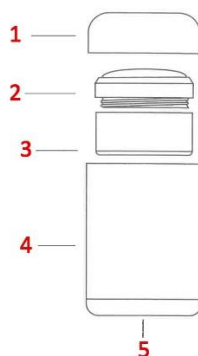

1.- Protective cover; 2.- Knife net; 3.- Safety buckle; 4.- Main body; 5.- Switch / Charging port

Instructions for use

Charging

1. First connect the USB charging power cord with the USB adaptable power jack, and then connect the USB Power cord and shaver bottom jack connection, at this time the red charging indicator will light up; The fully charged indicator light will turn white.
2. Unplug the USB charging cable immediately after the battery is fully charged, the power is used up and then charged.
3. Please do not continue to connect the charging power after a full charge, so as not to affect the product life.
4. Remove the USB power cable from the body after fully charged and store it properly.

Storage:

1. Please choose a dry, ventilated and cool place to put this product.
2. Please place the product properly and avoid children touching the product.
3. Please do not place the product in direct sunlight.
4. Please do not place the product in a high temperature or high pressure place to avoid damage to the product.

Product Features

This product is the latest portable razor launched, both the shape and function It is very convenient and practical. Mini body, easy to carry; precision ultra-thin blade network, no dead ends; rotating three-blade, trimming smoothly and smoothly, no residue; fast charging long life. No dead ends; rotating three-blade, trimming smooth and sharp, no residue; fast-charging long battery life. away from charging troubles.

Warm Tips

1. When charging, the switch must be off.
2. Turn off the razor, and then put the dust cover on to prevent damage to the blade network.
3. When there is head damage please do not shave to avoid damage to your skin.
4. Unplug the USB charging cable immediately after the battery is fully charged, the power is used up before charging.
5. Please do not continue to connect the charging power after a full charge, so as not to affect the product life.

Cautions

1. Please use this product within the requirements described in this manual.
2. If you have any skin problems or other medical problems, please use this product under the advice of your doctor after consulting him/her.

3. Do not use when your skin is red, inflamed, infected or blistered.
4. Do not use this product on warts, ulcers or wounds on the skin.
5. Seek medical attention in case of severe skin irritation or bleeding.
6. Due to the nature of use of the product, it is more appropriate to use this product at home.
7. Do not drop or insert any foreign object into any opening of this product.
8. Do not use this product in crowded places to avoid adverse effects.
9. Children should be taken care of to ensure that they do not play with the product.
10. When connecting external charging, you must use a charger with CCC or CQC certification of 5V-1A or more.
11. Let the product charge in an environment between 5°C and 35°C.
12. When not using the product, please place the product properly and avoid heavy touching the product.
13. Please do not place the product in high temperature or high pressure places to avoid damage to the product.
14. Please do not disassemble the product body at will.
15. If the power cord is damaged, it must be replaced with a flexible cord or a special component bought from its manufacturer or maintenance department.
16. This product can not be used as a toy for children.
17. This product can only be used as a household appliance, not for industrial use.
18. This product may not be used in the production of corrosive or explosive gases and other special environments.
19. This product can not be used as a medical apparatus.
20. When this product needs to be disposed of, do not dispose of it together with general household garbage, as this will cause harm to the environment and human health. Instead, place it in a special environmental recycling bin or recycling station for recycling.
21. In order to protect the environment, after the product or its parts are disposed of, it is your responsibility as a consumer to separate them from household garbage and send them to a qualified recycling site, where they will be sorted and dismantled, recycled and reused in accordance with the relevant national regulations.
22. Before disposing of the apparatus, the battery must be removed from the apparatus, before removing the battery, the apparatus must be turned off and disconnected from the power supply.
23. Warning: If the skin becomes painful or inflamed, please stop using it immediately; do not use it for more than 2-3 seconds in a certain place on the skin.
24. This apparatus is not intended for people (including children) who are physically weak, unresponsive or mentally impaired, if you need to use this apparatus, you must use this

apparatus under the supervision and guidance of the person responsible for its safety, and prohibit the use of this apparatus by unattended young children and disabled people.

Shaving is performed

1. Press the key at the bottom of the machine can start the shaver, at this time the white light began to Light up, press the key again, the machine stops working into the shutdown state.
2. Let the razor head move against the direction of beard growth on the skin, and do a straight and roundabout Move back and forth.
3. Shaving is best done on a dry face, so shave before or after washing your face for a period of time. Therefore, shave before or after washing your face for a period of time.
4. Be aware that your skin needs time to adjust to the shaving system.
5. The hair on the neck can also be shaved off.

How to replace the cutter head

1. Before replacing the knife head, make sure the power is disconnected and the machine is in the off state.
2. Hold the machine body counterclockwise rotation unscrew the screen cover, remove the protective frame, put the replacement blade into the screen cover and then fasten the protective frame, and finally rotate clockwise to tighten the knife screen.
3. Tighten the knife net needs to be completely closed, such as screwing oblique need to re-torque in until screwed in place.
4. It is recommended to replace the head once every three months to ensure the most ideal shaving effect.
5. When the head is old or damaged, please replace it with a special razor head, which will make your razor work better.

Cleaning and Maintenance

1. Before cleaning, you need to disconnect the power off, unscrew the knife network counterclockwise to remove the protective frame and blade After the available cleaning brush to clean up the dander, knife network and blades can be washed, wipe dry after the end of cleaning and rotate the head clockwise until locked.
- 2 regularly clear the French beard force to ensure better razor effect, it is recommended to clean once a week.
3. If needed, degreasing solution (alcohol) can be used to assist in cleaning the razor blade net, if you do so, please lubricate the razor blade net with a drop of sewing machine oil after cleaning, this can avoid the razor blade wear.
4. After installation, open the razor for inspection, the razor no noise, shaving more comfortable, less sound is installed correctly.

Common Failure Analysis

* **Poor shaving results**

Low battery power, dirty electric razor Blades or Damaged or worn razor Blades

Turn on the power for charging, clean the electric razor Blade net, buy a original razor blade in a autorized store

* **Power on does not work**

Battery is depleted, switch not working

Charge the device, is problem percist contact to technical Service

* **Charging indicator does not light up**

Charging display light is damaged or the circuit is faulty

Contact to after-sales Service

* **Skin irritation after shaving**

Your skin may need some time to adapt to a electric razor

Sintoms may dissapear after 2-3 week of aplication period

* **Unable to charge**

Is possible that the cable or the adaptor conection isn't good

The charging port may damaged

Verify that the alimentation conection its ok, if problema persist contact to after-sales Service

* **Shaving time is less than 30 minutes after full charging**

Shaving time depends on your shaving style cleaning habits and beard density