

## SMART WATCH Operation Guide




Model:C1&C2



One smart watch  
Born for sports  
Witnessing 'life lies in motion'

### Specification config and functions

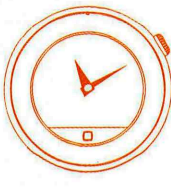

**Standard configuration**  
MTK Smart wearable system  
MT2500 Professional  
GSM 850/900/1800/1900MHz  
1.22" IPS/TFT Display  
RGB240x204 Pixels  
G+H Capacitive touchscreen  
2.5D Touch panel  
4P mini USB magnetic port  
(Data/Charging/Software)  
Bluetooth 4.0  
Headphone / Speaker (2in1)  
Microphone, Vibration motor  
G-sensor  
Heart rate sensor (or NO)


**Material and processing**  
Al-Ma alloy Watch case  
Al-Ma alloy on-off button  
Silicone sports strap (for C1)  
Stainless steel strap (for C2)  
Body 46.0 x 46.0 x 12.0mm  
Weight 50.0g(C1) / 65.0g(C2)

**Sports watch functions**  
Pedometer,  
Heart rate monitoring (or NO),  
Sedentary reminder,  
Sleep monitoring.....

**Smart watch functions**  
Bluetooth dial / call / answer  
Synchronous call record  
Bluetooth music,  
Remote camera  
Mobile phone anti lost  
SMS pushing.....

**Wrist phone functions**  
Recording, Stop watch,  
Alarm clock, Calendar  
Music, Calculator.....

**Standard accessory**  
Smart Watch (C1 or C2) x 1  
Magnetic charging port x 1  
Operation guide x 1

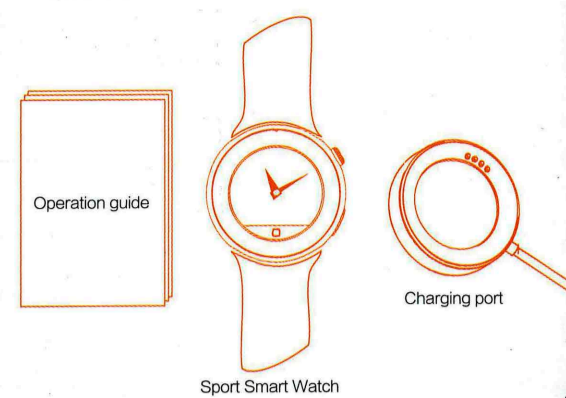



Sport Smart Watch



### Safety Notice


1. To keep this product & accessories away from young children, to avoid any accident.
2. Drive safely, to keep both hands on steering wheel when driving, use hands free mode or Bluetooth headset if need to answer phone call.
3. Please do not use this product to make phone call near gas station, chemical factory, mining fields, chemical factory or other sensitive areas.
4. Only institute or staff authorized by our company could disassemble or repair this product. Disassembling or repairing unauthorized may bring damage to the product and can be risky, also it will invalidate the warranty.
5. This watch may get a little warm when charging, which is normal.
6. The efficiency (standby time and usage time) of the internal battery may vary due to different usage or network conditions.
7. This watch is IP67 waterproof design and bear **30 minutes, 1.0 meters deep water or swimming under normal and low temperature**. But should avoid high temperature and humid environment use or storage.
8. The images in this user guide are for reference only, some picture may not be exactly same as the product, please refer to the actual product as final. If you find any mismatch in the user guide, or if you have any question/comments, feel free to contact our after sales service center.

### Product overview

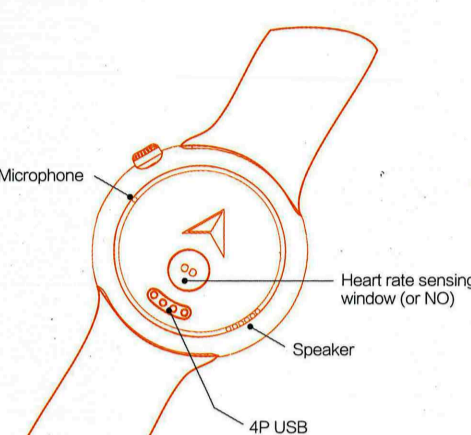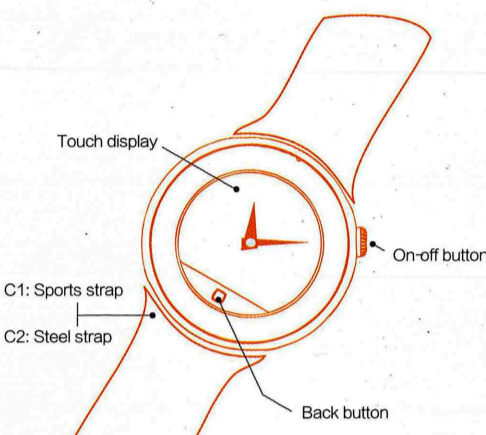

### Charging & Data transfer


This product uses magnetic port for charging & data transfer. If you need to charge this product or transfer data, just get bottom of this watch close to the magnetic port, that's all you need to do. (If necessary, please check whether the two are connecting properly).

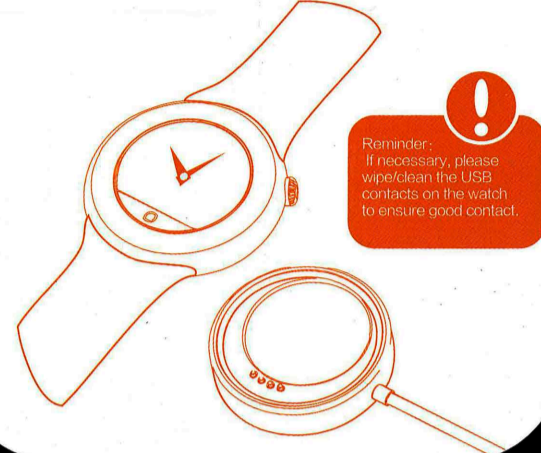

**Reminder:**  
If necessary, please wipe/clean the USB contacts on the watch to ensure good contact.


### Touch screen operation

In the function application or the settings menu, slide the touchscreen to up/down/left the screen window, slide from left to right the screen can exit the application and return on a menu or before windows until the clock dial interface (similar to the back button).

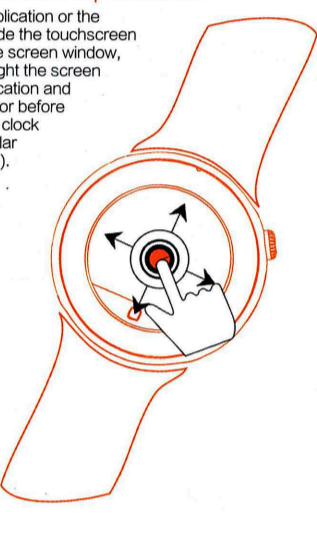


### Switch watch face

This watch provides different types of watch faces. You could select & quickly switch between the ones you like.  
Method 1: turn the digital crown to select the watch face you like, the system will automatically store your choice.  
Method 2: tap & hold on the watch face interface until the interface status changes and you could slide left/right to select from different watch faces, then click ok to store the setting.

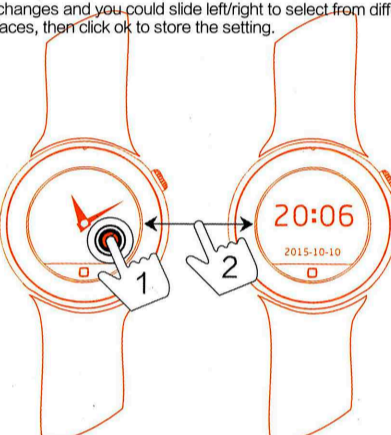

### Quick dial & Setting & App menu

Under clock interface, slide from left to right on the touch screen to activate quick dial shortcut (1). Slide from down to up on the touch screen to enter application menu (2). Slide from up to down on the touch screen to enter function control & setting panel (3).

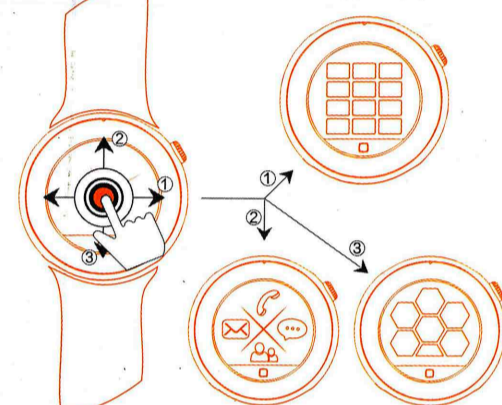


### Quick-Start Guide

1. How to set time & date?  
Route: Settings -> Clock  
Click off "Time sync", then could set time & date manually.
2. "Time sync", what does it mean?  
Once the watch sync successfully with phone via Bluetooth, then it will automatically use the time on the phone.
3. "Sync language", what does it mean?  
Route: Settings -> International -> Auto sync  
Once the watch sync successfully with phone via Bluetooth, then it will automatically use the same language as used on the phone (i.e. simplified Chinese, traditional Chinese, English, or other language). Click off for "Auto sync", then could select language by hand.
4. Why need pair the watch with the phone?  
The watch could be paired with phone via two methods, one is pairing via Bluetooth, the other is pairing via APP, both pairing methods require Bluetooth activated on watch and on phone. If the watch not paired with phone, then it could only be used as a independent sport watch (or a phone watch on the wrist), while if paired with phone, it could be used for many other companion functions as a smart watch.
5. The connection & difference between Bluetooth pairing & APP pairing?  
1) Bluetooth pairing is ordinary pairing solution between phone & Bluetooth device, similar to the pairing between a Bluetooth headset and phone to enable audio data (Bluetooth call, Bluetooth music) transmission.  
2) For Android phone, the APP pairing automatically turns on

Phone companion and APP download  
Support connecting with Android & IOS phones via Bluetooth.  
Enjoy smart life brought by new technology.

1. Bluetooth dial
2. Bluetooth phone call
3. Bluetooth answer call
4. Bluetooth Sync phone book
5. Bluetooth Sync call history
6. Bluetooth music control
7. Bluetooth Camera control
8. Phone anti-lost
9. Find Phone / Find Watch
10. SMS push message
11. SNS push message
12. Newsletter push message

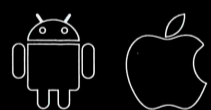

### Pedometer Monitoring

This watch is with G-sensor inbuilt, plus powerful sport calculation program, it provides scientific data for your walking activity, it's time for you to make a sport exercise plan.  
1. Pedometer: Targeted steps, actual steps, objective-task ratio.  
2. Calory detection: To know how much calories have been consumed during sport.  
3. Distance detection: To know how long (meters) you have walked.  
4. Big Data: This watch automatically records your physical fitness data for your big data base, and save it in cloud to check anytime.

### Gesture control

This product supports gesture control, especially suitable for one hand operation or quick/shortcut operation.  
1. Raise up wrist to show time  
To reduce power consumption, the screen will go off when standby; when you need to see time, just raise up your wrist and let the watch facing towards you, the time will automatically show on the screen.  
2. Shake your wrist to answer phone call  
You only need to shake your wrist few times to answer incoming phone call.  
3. Rotate to mute the call/alarm  
If you're not convenient to answer phone call, just rotate to let the watch screen facing down to mute the call. (the same applies to alarm clock)



### Configuration and function


Different configuration	C1	C2	C3	C5	C6	C7
Watch case	Al-Ma alloy	Stainless steel	Stainless steel	Stainless steel	Stainless steel	Stainless steel
Watch strap	Silicone	Genuine leather	Stainless steel	Stainless steel	Stainless steel	Stainless steel
Charging port	Al-Ma alloy	Stainless steel	Stainless steel	Stainless steel	Stainless steel	Stainless steel
Digital crown	Al-Ma alloy	Stainless steel	Stainless steel	Stainless steel	Stainless steel	Stainless steel
Stainless steel bottom cover	Stainless steel	Stainless steel	Stainless steel	Stainless steel	Stainless steel	Stainless steel
Support GSM SIM card	Support	Support	Support	Support	Support	Support
Support mini SD card	Support	Support	Support	Support	Support	Support
Built-in mini SD card	Support	Support	Support	Support	Support	Support
Heart rate monitoring	Support	Support	Support	Support	Support	Support
Atmospheric pressure	Support	Support	Support	Support	Support	Support
Altitude	Support	Support	Support	Support	Support	Support
Temperature	Support	Support	Support	Support	Support	Support
UV intensity	Support	Support	Support	Support	Support	Support
Health & Sport functions	Support	Support	Support	Support	Support	Support
Smart Watch functions	Support	Support	Support	Support	Support	Support

●: Standard configuration

### Frequently used operations

1. How to adjust volume during phone call?  
During phone call, you could slide upward/downward on the call interface to increase/decrease volume, or just rotate the digital crown to adjust volume (digital crown only on C5-7 versions).
2. At time of incoming phone call, or during phone call, how to switch to answer the call by phone or by watch?  
Since the watch is using speaker for phone call, if you do not want others to hear your conversation, you could "switch to phone or turn off Bluetooth" from the call interface on the phone, this will switch the call to the phone.
3. How to select Push Message & remind for some APP?  
1) For Android phone APP:  
Route: the SmartDevice APP Menu 'Settings-Notification-Settings' turn on/off push message option (tap the top left button or slide right on the screen to show APP Menu). Setting route in Android APP for QQ 'Settings-Notification Settings-PERSONAL APP' Route for Wechat 'Settings-Notification Settings-SYSTEM APP'  
2) There is no push message on/off button in Mediatek SmartDevice APP (on iPhone), push message will be the same as in iPhone 'Settings-notification', means if there's any incoming notification to the phone, it will be pushed to the watch. To stop such push message, please go to 'Settings-notification' to turn off relevant notification or turn off Bluetooth connection.
4. How to avoid being bothered by message notifications?  
Based on actual conditions, here are some ways to do this:  
1) To switch on push message option for some applications only in

- the Android APP. (suitable for Android phone users).
- 2) To change watch setting: 'Settings-sound-Alert type', here choose 'Vib. only'.
- 3) To decrease volume at 'Settings-Volume-Notification'.
- 4) Turn off the Bluetooth function on watch, or disconnect the Bluetooth connection between watch & phone.
5. How to understand smart sport watch face?  
1) Data like altitude (or relative height), temperature, air pressure, ultraviolet radiation, pedometer etc will all be dynamically showing in this watch face.  
2) To switch between altitude & relative height: click 'altitude' to activate, then back to the smart sport watch face.  
3) Ultraviolet radiation data include index (0-11) and strength instruction (level I-V & safety reminder & recommended action) would be seen in the UV APP (click UV icon in Watch menu).  
4) Pedometer data include: steps, mileage, energy consumption (calory) and completion rate of target (percentage).  
5) To switch to smart sport watch face from other watch face, system will automatically turn on relevant sensors and show the measuring data; while if switch from smart sport watch face to other watch face, relevant sensors shall be turned off automatically (Pedometer shall be turned on/off, click the icon in Watch menu).
6. How to customize unique watch face?  
1) Connect the watch (powered on) to computer USB via the charging port, and click 'Storage device' on the watch, then open 'My computer-removable DISC', create 'CLOCK' folder in this DISC and design files as following:

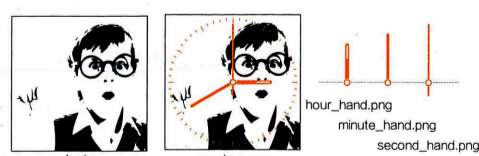

Form parts	Size	Format	File name
Watch face background	240x204 Pixels	JPG	bg.jpg
Watch face preview	240x204 Pixels	PNG	preview.png
Hour pin	Appropriate	PNG	hour_hand.png
Minute pin	Appropriate	PNG	minute_hand.png
Second pin	Appropriate	PNG	second_hand.png

- 2) To delete customized watch face: same as above operation to connect watch to computer, then delete the contents in CLOCK folder, or via operation in the watch 'menu - file management - watch' to delete above watch face files.
7. How to install watch face via APP?  
Android users could choose to install / uninstall via relevant watch face application in APP menu 'Settings - My Applications' (note: iPhone users currently not supporting watch face install via APP).
8. How to set & activate shortcut operation?  
(only suitable for C5-7 version with digital crown)

In watch 'Settings - Shortcut', select following shortcut functions, when setting completed, by pressing & holding digital crown shall activate relevant shortcut function immediately.  
1) Turn on pedometer (factory default setting). 2) SOS dialing. 3) Turn on Siri (only suitable for iPhone). 4) Turn on Bluetooth music. 5) Turn on remote camera.

9. How to use SOS?  
(only works in C5-6 versions with digital crown & SIM card)  
1) Precondition: make sure to insert valid SIM card into watch, then fill in urgent contact number in watch 'Settings-SOS' (or you could fill this urgent contact number in the phone APP 'settings - SOS call').  
2) To use SOS function: Simply press & hold the digital crown will activate SOS dialing, the watch will make SOS calls to the urgent contact numbers in cycles until the call is connected to any contact person.  
3) SOS dialing instruction: if one urgent contact number is powered off or can not connect, then it will switch to dial the next number immediately; if one urgent contact number could not be connected for more than 20 seconds, then it will switch to dial the next number immediately.
10. How to use 'find phone' and 'find watch' function?  
1) First need to successfully pair the watch and the phone via the APP.  
2) Use watch to find phone: click 'Find my device' icon in watch APP menu, when watch & phone distance exceeding the Bluetooth range, both watch & phone will make 'tick tick' sound at the

same time.  
3) Use phone to find watch: to click the 'Find my device' icon in the phone APP front page, then click the radar icon, when the watch & phone is within the Bluetooth range, the watch will make incoming phone call sound to alert.

11. How to use anti-lost function for watch & phone?  
1) First need to successfully pair the watch and the phone via the APP.  
2) Turn on 'Alert settings' and 'Range alert' in the SmartDevice APP 'Settings - Alert Settings'.  
3) Place the phone in a 8 meters distance with the watch, then click 'calibrate range size' until calibration is successful.  
4) Anti-lost setting: "when" = "out of range" and "Range Size" = "Far", if the distance between watch & phone is exceeding 8 meters, then the phone & watch will both make a alarm at same time.  
5) Depending on actual needs, you could select "when" and "Range Size" accordingly.
12. How to update?  
1) Watch firmware update: for watch with SIM card, latest firmware shall be downloaded automatically for OTA update if GPRS is turned on. For watch without SIM card, you could use APP to complete the OTA update (need to pair the watch with the smart phone APP in advance).  
2) APP update: when there's a new update available for the APP, you shall be reminded and informed about the update contents automatically.