


Smart Bracelet User Manual

1 Charging for automatic power-on

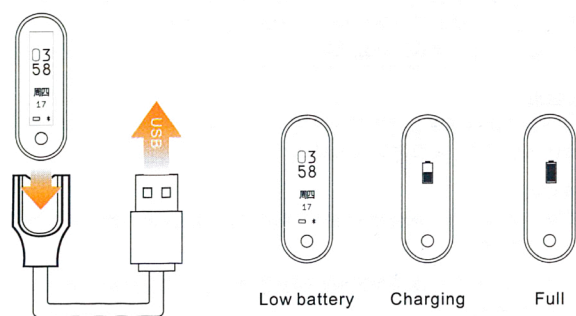


Once a power charger is plugged in, the bracelet will be activated automatically. Please charge the bracelet when it is in the "low battery" state.

1

2 Install Fundo Bracelet APP on phone


Search for Fundo Bracelet App or scan the following QR code for the installation

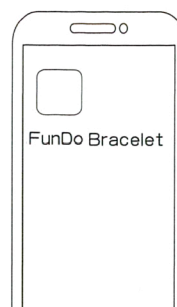

2

Start using


When the bracelet is connected to the App successfully, it will be synchronizing the time....

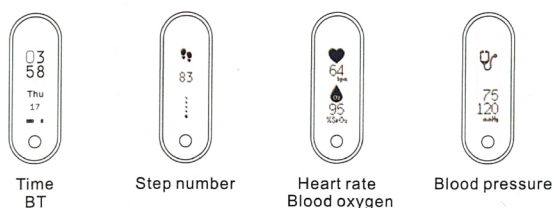

The blood pressure and blood oxygen level obtained by this device is only for your reference. Please consult with your medical professionals.

3

Bracelet Disassembling

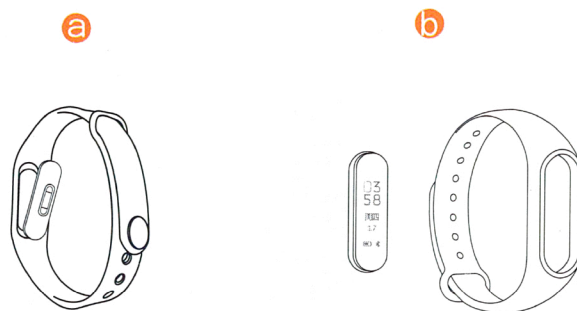

4

Other Functions:

1.1 Notification

Notification includes incoming call, short message, QQ messenger by vibration and IU displaying

1.2 Alarm Clock

Once alarm is on, its icon will be animated and the screen backlight is on and off three times

1.3 Reminder Mode

Screen backlight on and off
Vibration
Both

5

1.4 Gesture Control

Mode Setup: after click and activate this function, you need to select your bracelet is going to be put on left or right hand

Raising Hand: while raising your hand, the screen will be lighting up

Turning Wrist: while turning your hand, the screen will be lighting up

1.5 Unbinding the bracelet

To bind the bracelet to another mobile phone, you need to connect the bracelet to current mobile successfully via Bluetooth. Click unbind icon

(Note :when the bracelet needs to be bind to another mobile ,it needs to be tied the current mobile phone first .)

6