

# X2 User Manual



Thank you for choosing this product!

To have a comprehensive understanding and using this device, to know all the features and simple operation method, please read this manual first. The functions on the user manual may be little different with physical, please make the final products as the standard.

The typing errors in this manual and discrepancies will be timely updated with the latest products. If we have updates, this manual will be subject to change without notice. Our company reserves the right of final interpretation.

Package: one gift box, one user manual, one smart band unit.

Remark: the product supports waterproof with IP68 level, so it's available to wear it while wash hands, swim, take a shower, etc.

Buttons instruction:


“Power” button: long press for power on/off; short press for back to home screen. And screen is on or off accordingly if short press again.  
 “Enter” button: short press for enter;  
 “Switch key” touch: touch for menu options,



long touch for enter;

Charging instruction: this product adopts magnetic force charging. Put the charging point close to backside charging part of the unit, then it can charge automatically. It usually takes two hours to full charging. And its standby time is up to 180 days, up to 70-90 days working.

Please note that the two contacts of the charging cable can not touch the conductive object at the same time, otherwise it will cause short circuit combustion.

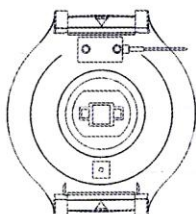

How to connect the product to phone:

First download “Fundo” APP on your phone and install it.

There are two options for downloading app as below:

1<sup>st</sup> option: use Android/IOS system phone to scan “QR” code as below or QR code in the watch-Tooling.



2<sup>nd</sup> solution:


Android Phone: download “Fundo” app from Google Play;

IOS phone: download “Fundo” app from App Store;

Open “Fundo” app and Bluetooth function from your phone after finish install, click “more” as below, then click “connect watch”



Firmware upgrade: At normal Bluetooth connect on status, enter FunDo, click More on the bottom right corner, find the firmware upgrade item, click it. If there is a new version, you will be prompted to upgrade, click YES, there will be a progress bar after you click YES, the upgrade process will take 3-5 minutes. The device will automatically boot and connect with smartphone after the upgrade is complete. Please disconnect the device, then connect again. Please note that if the progress bar is stuck, please do not do anything, let the progress work slowly until it is complete.

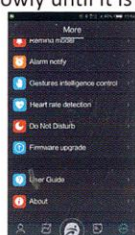

**Since there would be some difference of Bluetooth protocol for different smart phones, it may cause Bluetooth connection unstable sometimes. Turn off Bluetooth on the phone, then re-connect the watch and phone.**

Main Features: (first to open the APP on the mobile phone and connect to watch, in order to achieve the following functions)

- Standby interface: A total of 3 standby interface optional, in the standby interface, long press the switch key or enter key to switch.
- Pedometer: display the number of steps in a day, save data at 12 o'clock every night and reset to 0.
- Distance: show the day's step distance, save data at 12 o'clock every night, and reset to 0
- Calories: show the calorie burned of the day, save data at 12 o'clock every night and reset to 0.

- Health: Long press the switch button or enter button choose, touch switch button to change.
- Heart rate: press the enter key to test and scan the surface capillary of the skin by green light to get the heart rate data, switch to other menus to stop measuring, normal heart rate is generally 60-90 times / minute, professional athletes will be less than 60 times, when doing strenuous exercise will reach more than 200 times. Long term exercises can increase heart and lung.
- Blood pressure: please put your hand raised, press the enter key to test, the data will come out about 48 seconds later. Generally the elderly people's blood pressure will be higher, and female's blood pressure is a little lower than male's.
- blood oxygen: press the enter key to test, oxygen referred to as SPO2H, it means the

oxygen in the blood, normal blood oxygen saturation of about 94 to 99%.

- Sleep monitoring: the smart watch will open this function automatically from 9p.m to 9 a.m. every night. You can check the detailed data of sleep quality by connecting APP on the phone.

- Sports: press the enter key to enter the multi-sport mode, press the switch key to select the sport mode. Select a mode, press the enter key to enter, short press the power key to stop, and then press the switch key to return to the multi-sport mode. There are jogging, biking, swimming, basketball, table tennis, badminton, hiking, love and football modes in the multi-sport mode. Each exercise data has movement time, calories consumption, and heart rate (swimming mode without heart rate)

- Notifications: synchronous mobile phone end

notification function, such as Facebook, WhatsApp and so on, if you want to display the notifies with content, need to setup to display the details of Facebook and WhatsApp notice function in the APP in the cellphone, it can show the latest 8 notifications, press the enter key to read, press the switch key to next message, short press power key to back. It will vibrate for incoming calls and messages.

- Tooling: Software version (check the Bluetooth address and name), Bluetooth remote camera ( open Bluetooth camera on APP, press the enter key or switch key to take pictures; Find my phone ( long press Switch button enter, short press switch button return).

- Stopwatch: press the enter key to enter, then press again to pause. Click the switch key to exit.

- Alarm: Can set several alarm clocks through

the APP on mobile phone.

- Data transmission: need to download FunDo APP on mobile phone, after the connection is successful, the date of Pedometer, heart rate, sleep quality, and multi-sport mode can be transmitted to the APP on the mobile phone. Some data needs to be manually synchronized.

- Reset: Enter Tool - Reset - Long press Enter key for 3 seconds, reset successfully.

## Warranty

1. If it appears quality problems caused by manufacturing, materials, design within one year (since the day of purchase) , we will offer free warranty for main part. We will offer free warranty for battery and adapter within 6 months. Premise is using normally and correctly.

2. About the fault caused by the users personal reasons, we don't offer free warranty, as follows:

1). Disassemble or refit the product.

2). Caused by immodesty drop

3). All artificial damage or misuse (such as: make water into the host, the external force shatter, scratch damage of peripheral components, etc.), all these are beyond the scope of the warranty.

3. When ask for free warranty, you must provide a warranty card with the seal of purchase place and purchase date.

4. If you met problems during use, please contact the shop customer service which you bought from.

5. Please make the final products as the standard.

Date of purchase:

Buy store:

Customer signature:

Clerk Signature:

Shop stamp: