

The Instructions of Smart Bracelets



Before the endless
Heiner Sea

Please consult the instruction manual before your usage.

V1.0

Guidelines

1) Presentation and description of appearance of the product



2) The instruction of Function

- Motion steps
Calculate the number of moving steps, walking time, mileages well as calories.
 - Sleep monitoring
Monitor the quality of sleep every day accurately, calculate the time length of deep sleep and light sleep.
 - Health measurement
Monitor current health information, including heart rate, oxygen, blood pressure accurately.
(Data are for reference only and not for medical use)
 - Multiple motion modes
Accurate measurement of multiple modes of exercise: cycling, running, swimming, calories consumed and length of exercise
 - Alarm clock/message reminder
Alarm clock, phone, Facebook, Line, WhatsApp, QQ, WeChat, SMS, sedentary reminder, anti-lost reminder
 - Remote control camera
In favor of remote camera for mobiles or Flip your wrists to take photos
 - Hang up phones
Press Bracelet touch button for a long time, you can hang up the phone.
- 3) The instructions for Switching on/off the Tool
- Press the touch button to boot the tool for a long time.
 - If you press for a long time, but fail to start, please make sure whether the battery is out of power or not.
 - If the battery is out of power, Please pull out the head strap. Insert USB charging interface and switch on after charging
 - On the shutdown interface, press the touch button to shut down the tool for a long time.

4) APP Installation and Device Binding

- The requirements of mobile phone configuration: Android system 4.4 and above, IOS system 8.0 and above, Bluetooth version of wood BLE4.0 and above.
- Scan two-dimensional code below, download Android or IOS APP, then install them on the phone.




c. Device Bonded

Mode 1, Scan and connect two-dimensional codes in order to bind, as shown in the picture. On the "step" interface, press the touch button for a long time, produce two-dimensional codes connected by blue-tooth this bracelet (when the bracelet is connected with mobile phones, then press the button for a long time, it will not open and link two-dimensional code)



Note: Each Bracelet connects two dimensional code, They are automatically generated. Each device is connected to the two-dimensional code is not the same Click APP scan code function. Scan Bracelet display connected two-dimensional code can quickly pair connection



Click the function of scanning code, scan two-dimensional code displaying on the bracelet.

Mode2, Search and link to blue-tooth model, as shown in the picture.

d. Device unbound, as shown in Figure.



Note: When the bluetooth icon on the bracelet ends is in a stationary state, which represents the fact that the bluetooth has been connected.

When the bluetooth icon on the bracelet ends is in a blinking state, which represents the fact that the bluetooth has not been connected.



Click the function of scanning code, scan two-dimensional code displaying on the bracelet.

5) Function Icons and Operating Instructions of Bracelets

Main interface date: Date, time, week, power, Bluetooth connection status		Press the button, then enter the next interface for a short time.
Step interface: Display the number of steps of the day.		Press the button for a long time, connect to the two-dimensional code interface. Press the button, then enter the next interface for a short time.
Training mode interface: Into the training mode, including cycling, running, swimming mode, return		Press the button, then enter the next interface for a short time.
Heart rate interface: Measuring heart rate value The results showed that heart rate, systolic blood pressure and diastolic blood pressure, blood oxygen value		Enter this interface to automatically measure and display heart rate, blood pressure, and blood oxygen values Press the button, then enter the next interface for a short time.

The sleep icon interface: Displays sleeping time the night before		Press the button, then enter the next interface for a short time
The alarm clock icon: Displays the alarm clock time		Set the alarm time by APP. Press the button, then enter the next interface for a short time
Look for the phone icon:		Press the button 2S to start searching for your cell phone for a long time. Press the button 2S for a long time again to exit the search. Press the button, then enter the next interface for a short time
Device information interface:		The Bluetooth address code and firmware version are displayed on the long press. Press the button, then enter the next interface for a short time
Shutdown interface:		Long press shutdown. Press the button, then enter the next interface for a short time

6) The Description of APP interface


a. Settings

- (gender, age, height, weight) please complete the user carefully
- Please refer to the equipment binding and APP instructions
- The relevant reminder function can be turned on or off, and the operation mode is as follows:

b. Step interface

- Record the number of steps in the day (24 points per day)
- Click into training mode
- Check the history steps
- A bar chart of the day's moving steps

c. Sleep interface:

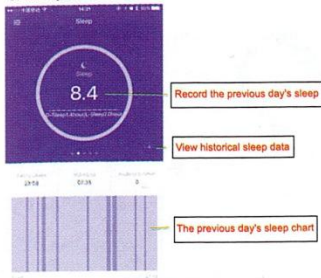

d. Heart Rate interface:



e. Bp interface:



f. SpO2 interface:



7) Precautions for use:

- a. Theoretically the wristband supports mobile phones or tablet system IOS 7.0 system or above and Android system 4.3 version or above with Bluetooth 4.0, but not all mobile device models are available. Please refer to the actual.
- b. This delicate element, please do not throw it and strike it with hard objects, otherwise the machine surface will be scratched or hardware be damaged.
- c. Do not disassemble or transform the product, otherwise problems will occur or product quality guarantee be hampered.
- d. It is forbidden to throw the product into fire for fear of explosion.
- e. Note in wearing: if you are sensitive or wear the wristband too tight, you might feel uncomfortable.
- f. Please wipe the wristband if it is wet prior to charging, otherwise failure will be caused and the charging touch points corroded.
- g. Under the strong static environment, failures might occur, e.g. no display or abnormal display etc, Do not use it in high pressure or high magnetic environments to avoid electrostatic interference.
- h. It is waterproof only when the lens and enclosure are intact. Water tightness may be ineffective resulted from violent dismantlement or installation.
- i. This product is waterproof for cold water to hot water may lead to fog appears in the lenses.
- j. The battery life time by using environment and use pattern changes.

Disclaimer:

Warning: This product is not a medical device, bracelet and its application should not be used for diagnosis, treatment, Or disease, illness prevention and other acts, to change the movement, sleep and other habits, be sure to first Qualified professional medical personnel consultation, so as not to cause serious casualties. I remain in the company do not do pre-pass Know the power to modify and improve any of the functions described in this manual The company to keep the content of the product to update the right, all content, please prevail in kind!