

Smart Fitness Bracelet

User's Manual



Product appearance



Support device version



Quick Start Guide

1. Download WearHealth

The wristband requires application support before it can be connected to the cell phone. Before downloading the application, please check the requirements of the mobile phone system hardware platform.

Searching method 1: Scan the QR code to download



2. Product activation and charging

The initial use of the product requires a charge to activate the product.

Start to use

Key function


Click: function switch

Long press: activate, mode switch

Once the phone is successfully bound, start recording and analyzing your movement, sleep, and display mode such as touch, click and switch.

Operating Instructions

- Please fully charge the bracelet before using, and it will launch automatically after charge.
- Power ON/OFF, Switch to the power off page shown as below image:

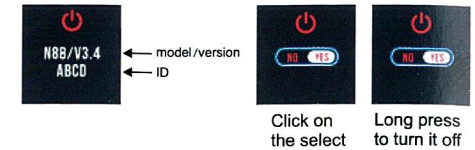

Click "YES" and long press the power button to turn OFF.

Short press the power button it will turn ON. During the charging, it will auto launch.

Thank you for purchasing this product. We highly appreciate any feedback which helps us to improve our products. Please keep this instruction manual for future reference.

Bracelet Functions

1. Normal mode display



Running Steps Calories Distance




PPG heart rate measurement Blood Pressure Message Long press to search cellphone

2. Clock interface display



Standard interface

3. Heart rate interface display



PPG heart rate measurement Heart rate value (Vibration prompt measurement is over)

Warranty

The product is guaranteed by the manufacture for a period of 1 year from the date of purchase the guarantee does not cover defects arising from accident damage misuse or wear and tear and is available only to the original purchaser of the product.

Specifications

- Dimensions: 46*35*10.7mm
- Product weight: 35.3g
- Display screen: 1.3" TFT
- Resolution: 240*240 dpi
- CPU: nRF 52832
- Battery: 180 mAh
- Standby time: 25 days
- Working time: 5-7 days
- Waterproof: IP68
- Body material: PC
- Band material: Silica gel
- Compatibility: IOS8.2+Android 4.4

Contents of the page

- 1x Smart Bracelet
- 1x User's Manual
- 1x Magnetic charging cable

FAQ

1. The wristband cannot be found when pairing?

Please make sure your phone is Bluetooth enabled. And when the phone is pairing in the "support range", please make sure that the distance between the wristband and the cellphone is within 0.5 meters. The Bluetooth communication range is within 10 meters after pairing.

2. Why is Bluetooth not connected occasionally?

Some mobile phone's Bluetooth service will have an exception when it is restarted, which leads to such a situation. Usually you can reset the Bluetooth or restart the phone to establish a normal connection.

3. How to restore the factory default settings?

After the wristband is connected to your cellphone, please enter the "My wristband management" in the application and choose "restore factory settings".

4. How to update the firmware of the wristband?

After the wristband is connected to your cellphone, please enter the "wristband management" in the application and choose "firmware update".

WARRANTY CARD

User name: _____

Subscriber phone: _____

Reference: _____

Date of purchase: _____

Warranty period: 1 year