



Features:
MCMELLCAO Multi-functional wireless bamboo charcoal silicone cleansing instrument
Is a deep cleansing , go black, Go to the makeup dirt electric face wash, Import instrument multi-functional products.
Positive and negative ions: The use of positive and negative ions attract the opposite sex principle , Derivation of deep pore soils by bioelectrical currents, And use bamboo charcoal silicone thoroughly clean.
Charcoal powder: Is a high temperature carbonization process technology from refining, Rich in natural minerals, Silicone inside adding charcoal powder, Has a good adsorption and cleaning capacity, Can effectively penetrate the pores, Remove dirt , Leaves skin smooth, Maintain the original skin moisture, Feel more comfortable.
Shock: Using 3D sound waves, Use bamboo charcoal brush, Deep cleansing.

Features:
Bamboo charcoal deep cleans the skin
Bamboo charcoal cleaning pores deep black, To clean pores, Anti-acne to blackheads

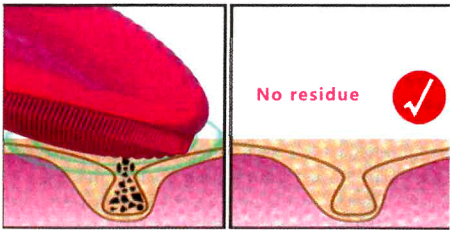

2

Part Name:

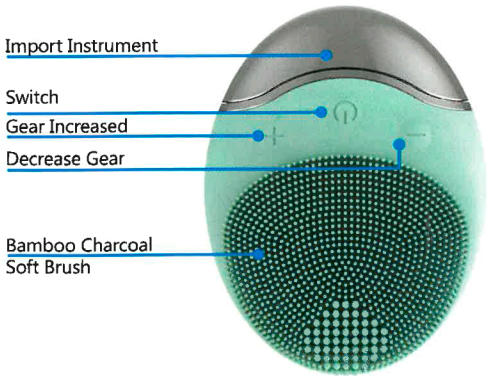

4



Product parameters:
product name: Multi-functional wireless bamboc charcoal silicone cleansing instrument
Product Type: JMY-003
Charging voltage: 5V / 1A
Charging time: 3 ~ 4 hours
Battery capacity: 400mA
Rated power: 0.8W
Motor speed: 12000 r / min
Battery voltage: 3.7V-4.2V
Input voltage: 110V-220V
Product Size: 8.5CM * 6.5CM * 3CM

6

- Import mode:
1. After cleaning the face, Open the switch button , Select import mode , According to the needs of the appropriate choice of gear strength.
2. Using the product import meter function, Sonic import for the eyebrows, Eye tail position, On both sides of the nose and other parts, Slowly move the skin , Can promote the introduction of massage, Nourish cleansing (With eye cream, The essence of the use of better)

Operating instructions:

1. 5 stalls, On the left for the downshift, Right for the file, Stall has memory function, That is adjusted to a stall after powering on, Power off again after the boot is still shut down before the stalls;
2. Boot light flash , Lights up and down when the file.
3. boot automatically stop after 15 minutes, Enter the protection state
4. Waterproof grade IP 7
5. The charge is always bright, full of electricity and not light.

8

Safety Precautions:
This product is for beauty skin care equipment, please do not use for beauty purposes, Please do not use for beauty purposes, Do not use for plastic, sunburn, traumatic infections and other skin problems.
Do not use accessories other than those supplied with this product as this may cause danger
When the user's body abnormalities, please stop using.
Do not use this product in unconsciousness.
This product and packaging accessories should be placed inaccessible to children in the place, so as to avoid accidents.


Precautions for safekeeping

1. Proper maintenance helps to extend the life of the product
2. After each use, please thoroughly clean the product. And rinse with water , Do not use alcohol , Skin-irritating products such as gasoline or acetone Wash the product Clean the product.
3. Avoid direct sunlight and do not expose it to high temperatures or to sources of ignition.
4. Due to health reasons, it is recommended not to use this product together with others.
5. Do not disassemble this product yourself, please keep it for a long time when it is not used.

Nourish the introduction of massage
Gently shaking, Anion import massage eye, Face, Nutritious skin.

Negative ion introduction

Electroplating anion layer can effectively import nutrients to the muscle

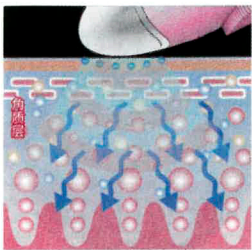

3

Import Instrument



5

Instructions:

- Cleaning mode: (Recommended once a day)
1. Click the switch button , Open the cleaning mode, According to the needs of the appropriate choice of gear strength.
2. Using the thickness of silicone contact with facial cleanser to clean the entire face, The recommended time is one minute.
3. Bamboo charcoal can be deep cleaning, Remover to clean up cosmetic residue.
- Soothing mode:
After daily cleaning face , Can be comfortable mode, Recommended once a day.
1. After cleaning the face, Press the switch button, Turn on soothing mode According to the needs of the appropriate choice of gear strength.
2. Use the back of the product sonic silicone corrugated contacts, For eyebrows, Eye tail position, Before the lips of the site, Slowly move the skin , Can promote blood circulation, relieve fatigue.
3. With the use of essential oils or other care products better, (Do not bond the substrate, Silica soluble, Exfoliants or scrubs are used with skin care products)

7

Clean / Care / Favorites

Cleaning: Cleaning machine must be kept off, Rinse with warm water mixed with neutral detergent, Then wipe dry with a clean cloth.

Maintenance:

1. If this product is damaged, Do not continue to use
2. Glasses on their own non-self-disassembly of the machine, If there is any malfunction of the machine or can not be used normally, Please send it back to the designated service center for inspection and repair.

Collection:

In the case of long-term non-use, Please turn off the instrument, Store in a dry place, Avoid direct sunlight, Exposed to high temperature or boiling water.

9