
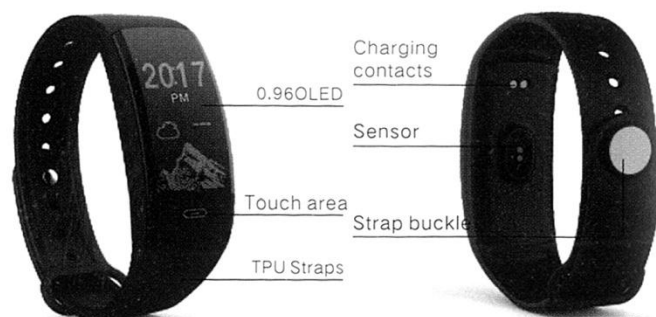


One, Product description

1, Product instructions

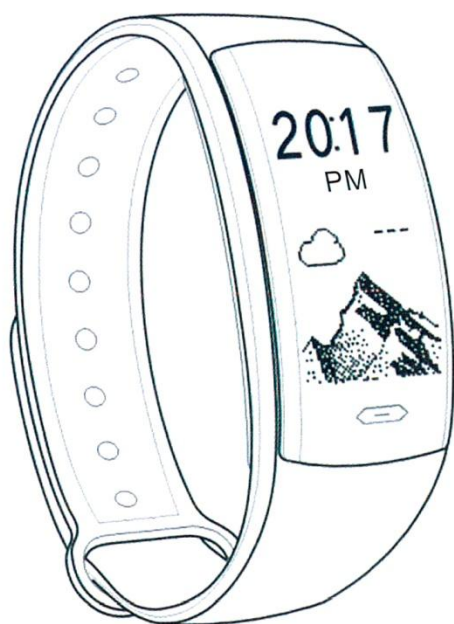

2, Packing list

★ Wristband x1 ★ Box x1 ★ Manual x1 ★ Data lines x1

3, Wristband basic operation

Boot: Long press the bracelet touch area, there hello
 Shut down: Set up-Shut down, Long press shut down
 Wake up the screen: Touch screen, or raising hand, Turn the wrist light screen
 Switch the main menu: Click the touch area
 Go to submenu: Long press the touch area
 Switch submenu: Click the touch area

4, Bracelet battery parameters

★ Type of battery: Lithium polymer battery ★ Battery model: CH311222
 ★ Battery capacity: 70mAh ★ Charging voltage: 3.8V / 4.35V
 ★ Recharging current: 0.26WH

Note: The Company reserves the right to make changes to the contents of this manual without prior notice without notice. Part of the function and then the specific software version is different, as a normal situation.

User instructions

Two, Instructions for use

1, APP download address

Andrews:

a, ying yong bao, Pea pods and so on, search for "Fundo" and download

a, Sweep the two-dimensional code on the bracelet and download

IOS:


i, In APP Store search for Fundo

i, Sweep the two-dimensional code on the bracelet and download



2. You do not need to register your login account Bluetooth connection

2.1 After the boot bracelet Bluetooth has been in the search state, open APK/APP, enter "more"-"Add device", Click search, Connect the corresponding bracelet device name (the bluetooth name: QS90)
 2.2 Bracelet time synchronization: The bracelet is connected to the phone, You can achieve the bracelet and mobile phone time synchronization. (Note: 12 hours / 24 hour system time synchronization need to be consistent)

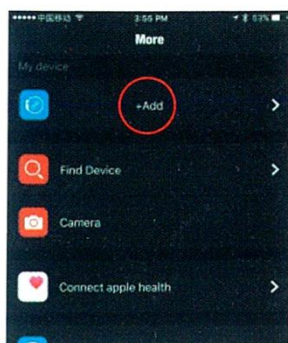

Three, Features



1 Main interface

Press the touch area in the main interface to switch the dial directly. You can also "more" which can switch to the "dial" Choose your own style dial



2 Step

Always check the number of steps walking in the day, Can also be synchronized to the APP in time, view and analyze the movement data



3 Movement distance and calories

The equipment automatically monitors the movement of mileage, heat consumption



4 Health monitoring

Long press to enter the heart rate real-time monitoring, Blood pressure monitoring, blood oxygen monitoring



5 A variety of motion mode monitoring

Press to enter the movement mode monitoring.



★ Long press the movement mode to enter and start the calculation, click to view the movement data, long press to save the data and exit



6 Sleep quality monitoring

Wearing a bracelet to sleep, can monitor the length of sleep, and deep sleep and light sleep state, According to the data can adjust their sleep status, improve the health index.



7 Information reminder/Push

When there is new information, the device will shake the reminder and display the message content; The corresponding message displays the corresponding icon, The information will retain the current 8 content.



8 Weather reminder

Connect the phone APP, the phone will be synchronized in the weather, Timely view the weather temperature and weather conditions.



9 More settings

Press to enter more function interface.

Prerequisites: More of the various functions are successful in the Bluetooth connection, mobile phone system corresponding to the notification authority to be opened, and to enter APP / APP More - Apply push to open the corresponding third-party application.



- * **Stopwatch:** Long press to enter the stopwatch timer start, press the touch key to pause, then press once to continue, Followed by loop
- * **Find phone:** In the case of normal Bluetooth, long press to send a signal, the phone will ring the bell
- * **Dial:** Press and hold, click toggle dial, long press to confirm and return to the main interface
- * **About:** Long press to enter, view version information, Bluetooth information and Bluetooth name
- * **Power off:** Long press the vibration off
- * **QR code:** Long press will display APP two-dimensional code, mobile phone scan can be downloaded to install
- * **Flip over:** Long press to set the opening and closing
- * **Reset:** Long press to initialize the device

Other features to remind



incoming call

When you call, you can view the caller's name. Inconvenient circumstances, long press to hang up




Drink a reminder

You can set your own in APP. Drink frequency and time to remind

5, Step function, Click on You can set the target value for the movement.



6, A variety of sports. Click on Make the basic settings in the mode. Click on Start exercising. And can view the trajectory. Click on You can upload the history of hand ring movement.

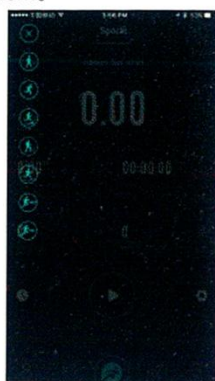

7, Automatic Heart Rate test and Monitoring. Click on Set the time period, and the frequency settings for heart rate monitoring.

Five, Precautions

- 1, Do not use a charger with a current greater than 5V2A. Charging time is 2~3 hours
- 2, Do not charge if the device is water damaged
- 3, This is an electronic monitoring product; date received from it cannot be used as medical reference and is for reference only;
- 4, Blood pressure testing tip:
Keep your body relaxed and still while testing.
Keep device at the same height as where your heart is and don't talk while you are testing



Alarm clock

In the APP can be set up multiple alarm clock and can, Set the number of days to repeat the alarm



New message reminder

When there is a new message, there will be vibration and display, Long press to enter the view information.



Sedentary reminder

This function must first open and set the APP side



Low battery reminder

When the bracelet device power is too low The case will prompt the timely charge



Find bracelet

Open APP click to find equipment, bracelet will be displayed and vibrated



Remote control camera

When the APP side to open the remote camera function The bracelet displays the camera icon

Four, APP Features

1. Enter "Me" user information settings.
2. Enter "More" Add device Find a Bluetooth device (QS90) and connection
3. After the connection is successful, you can set some of the functions of the bracelet.
4. Unbundled. Click or slide to the left to unzip it, Follow the prompts to unbind the device

Warranty Card

Customer Name	
Phone NO.	
Purchase Date	
Sales Address	
Selling company	
Model	
Product IMEI code	

Warranty description

- This warranty card please safekeeping, to do maintenance certificate.
- Within 12 months of warranty period from the date of purchase.
- Equipment warranty within the warranty period under normal use and service, machine parts materials There is a problem, and the function of fault inspection is true, the company will provide free repair and Replacement parts.

The following are not free repair

The company's products shall be limited warranty within the warranty period. The equipment is under the following circumstances Avoidance or damage, not in the scope of warranty (although in product warranty), the company does not undertake Warranty obligations.

- Equipment, components have been beyond the warranty period;
- The customer is not in accordance with the specification requirements, installation error, storage and use of equipment malfunction or damage;
- The company by non authorized agencies, personnel and equipment malfunction or damage of disassembly;
- Because of unexpected factors or reasons (including error, scratch, handling, not losing a bump The appropriate voltage and current) equipment failure or damage;
- Due to natural disasters such as force majeure (such as earthquake, fire) equipment malfunction or damage caused by;
- The user to alter, tear up the product bar code;

Repair instructions

Over the free warranty period and not within the warranty period of the equipment regulations, the company can also provide Repair service, but the need to collect and repair costs.